



How to calibrate the Feedlync system and the wagon?


1. Log in to the Feedlync appusing your credentials.

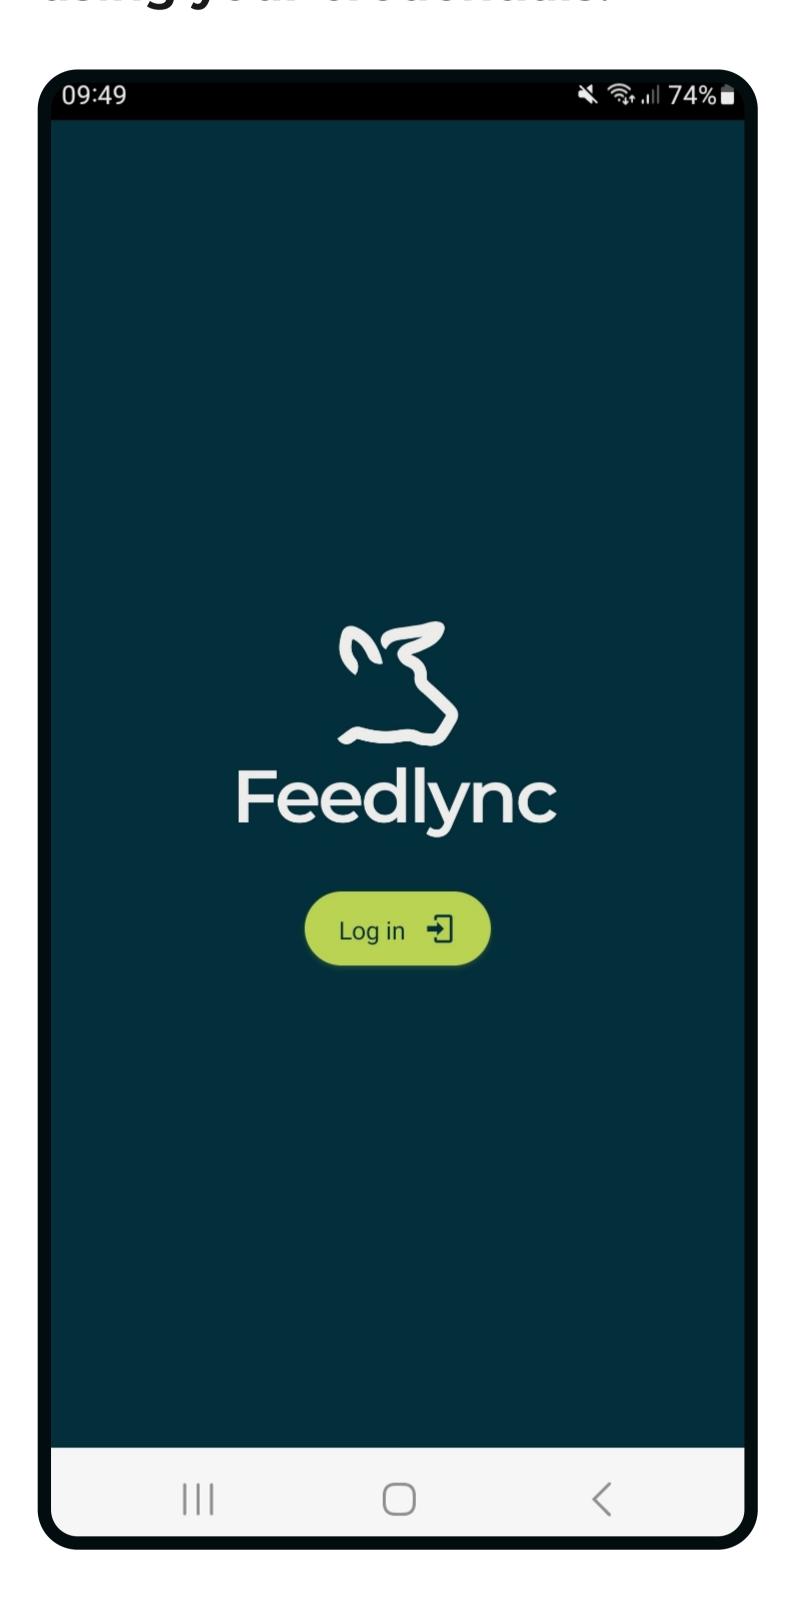


2. Tap the menu icon.

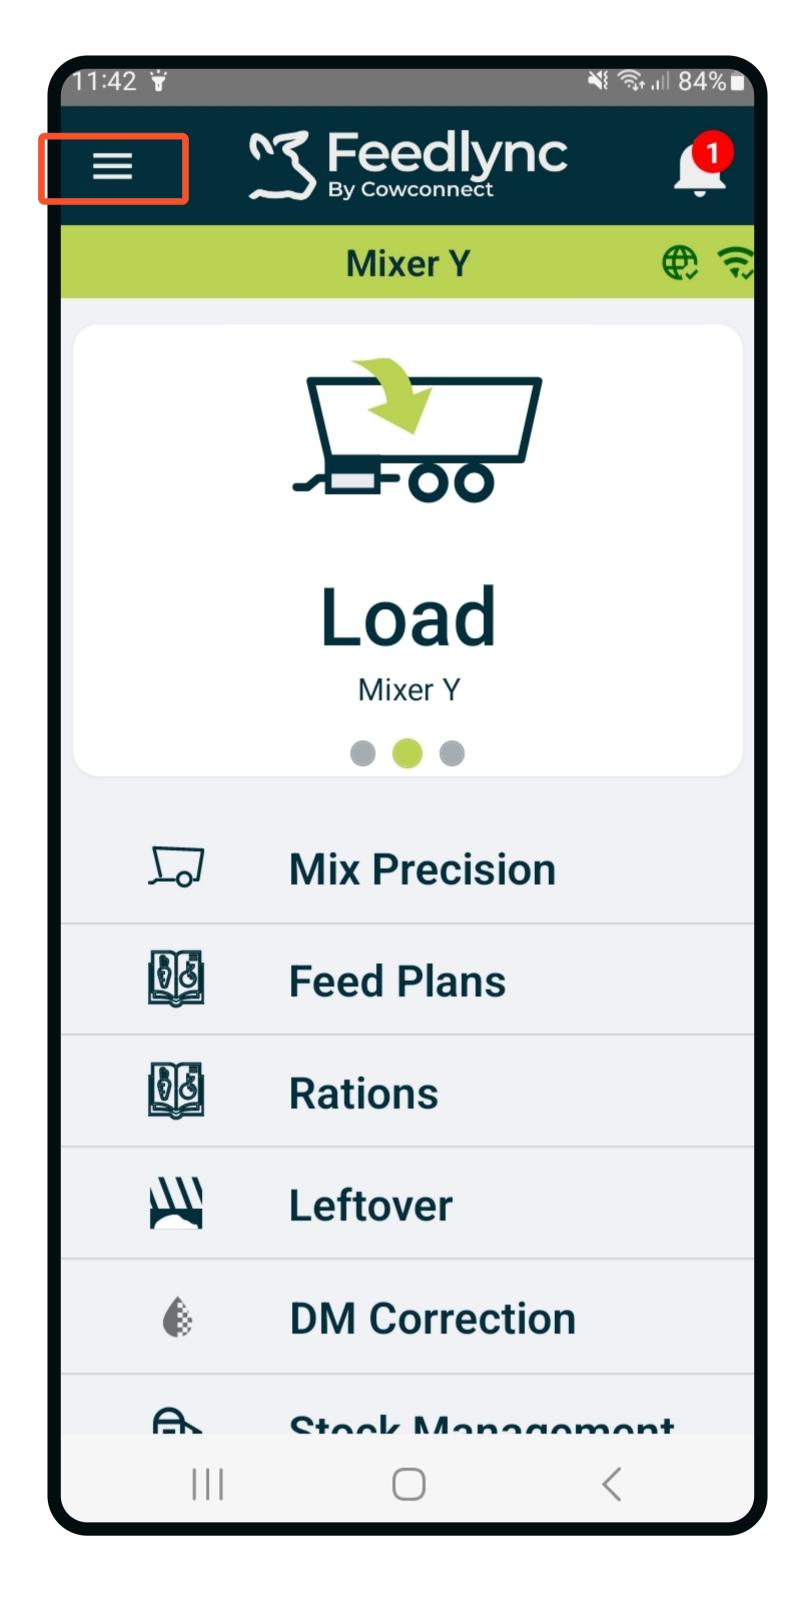


3. Select the cog icon.

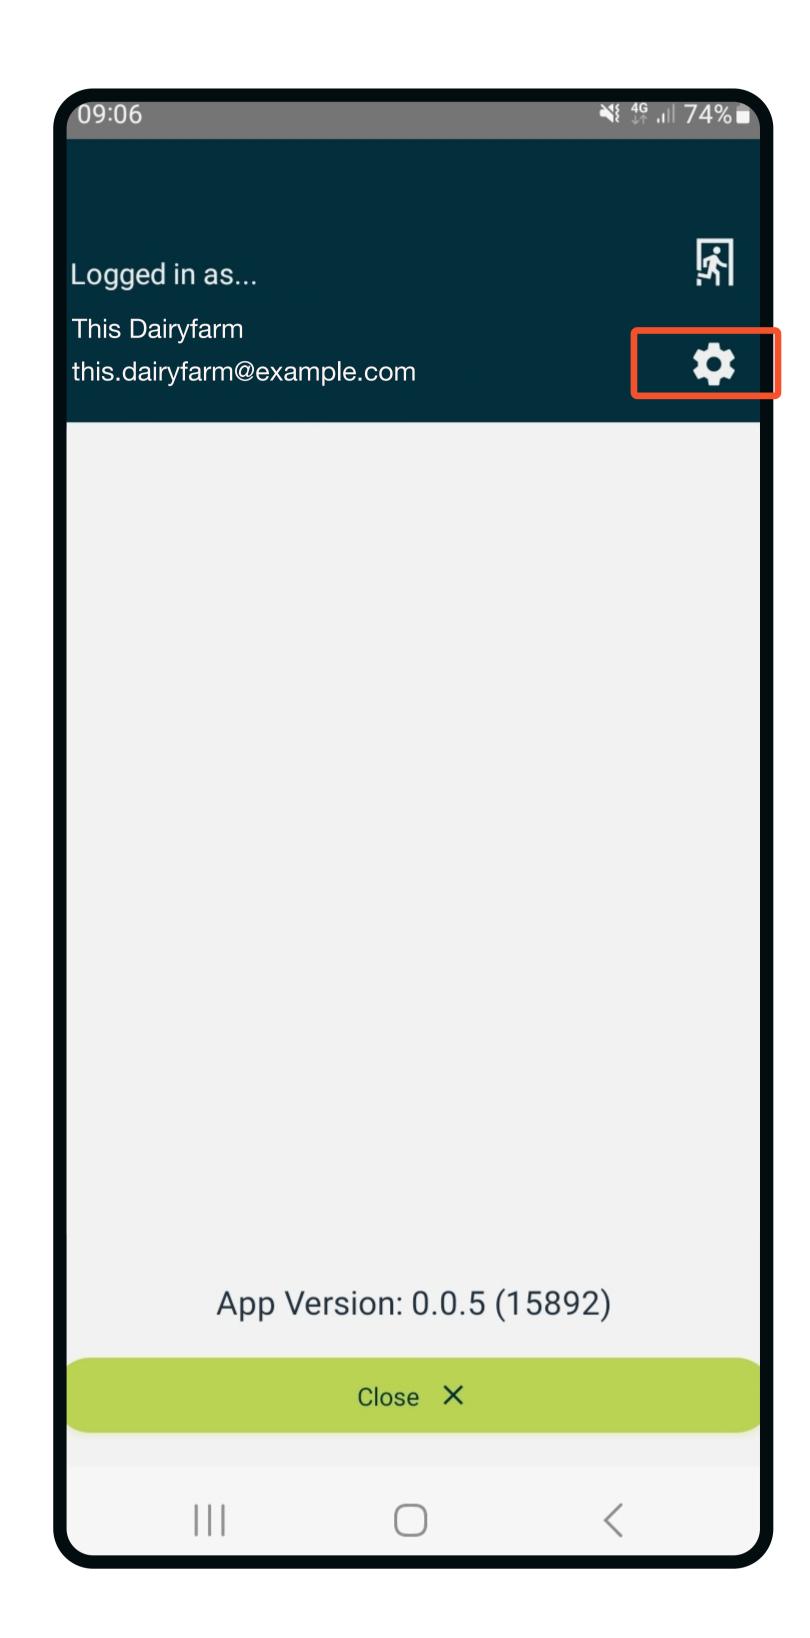

4. Then choose Device Settings.

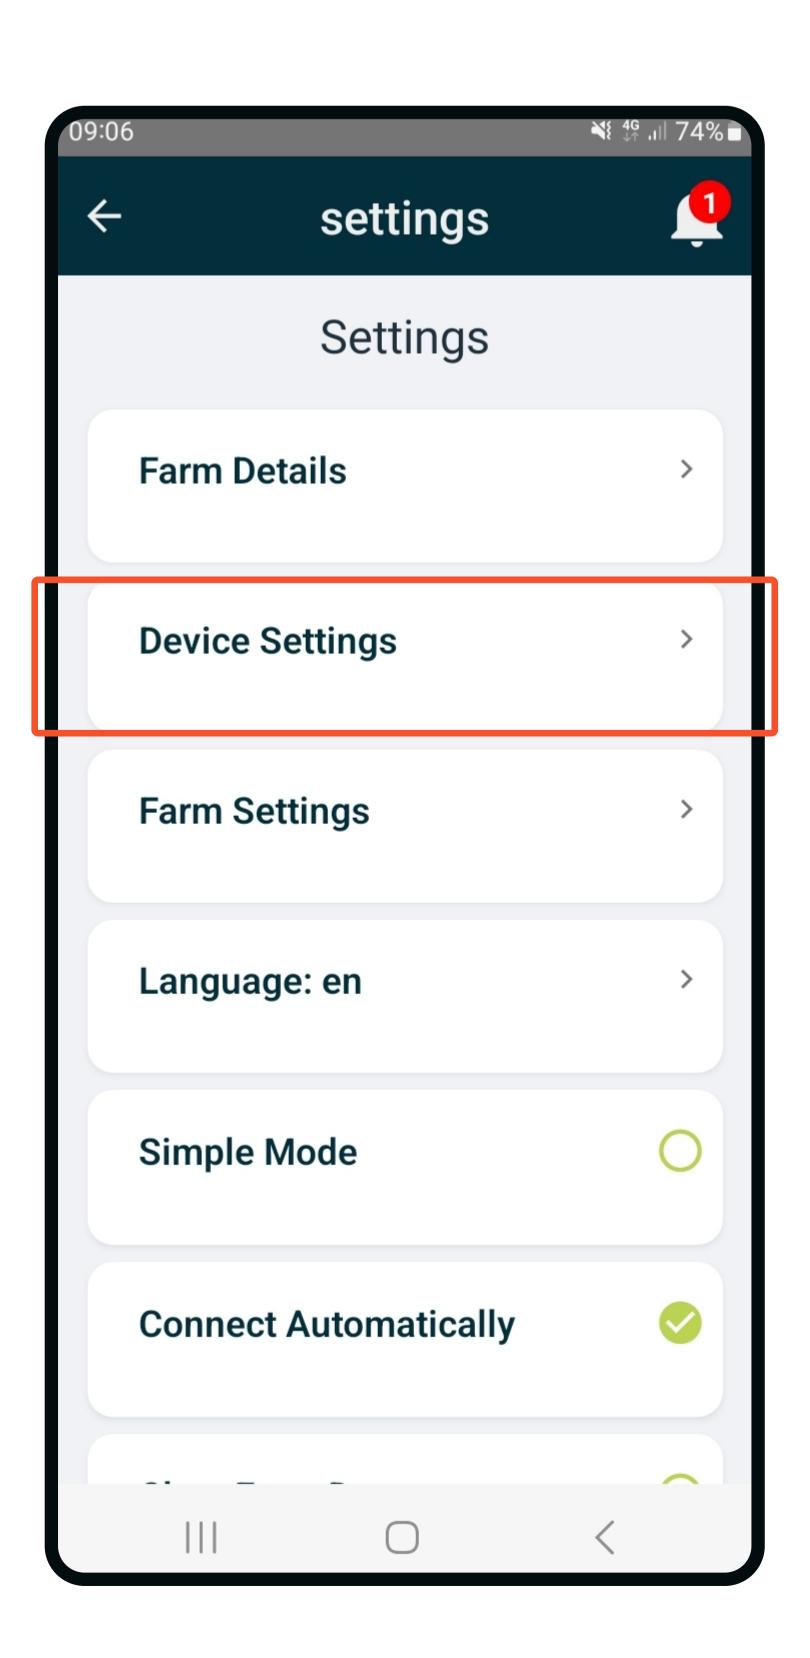

5. Ready to calibrate device.

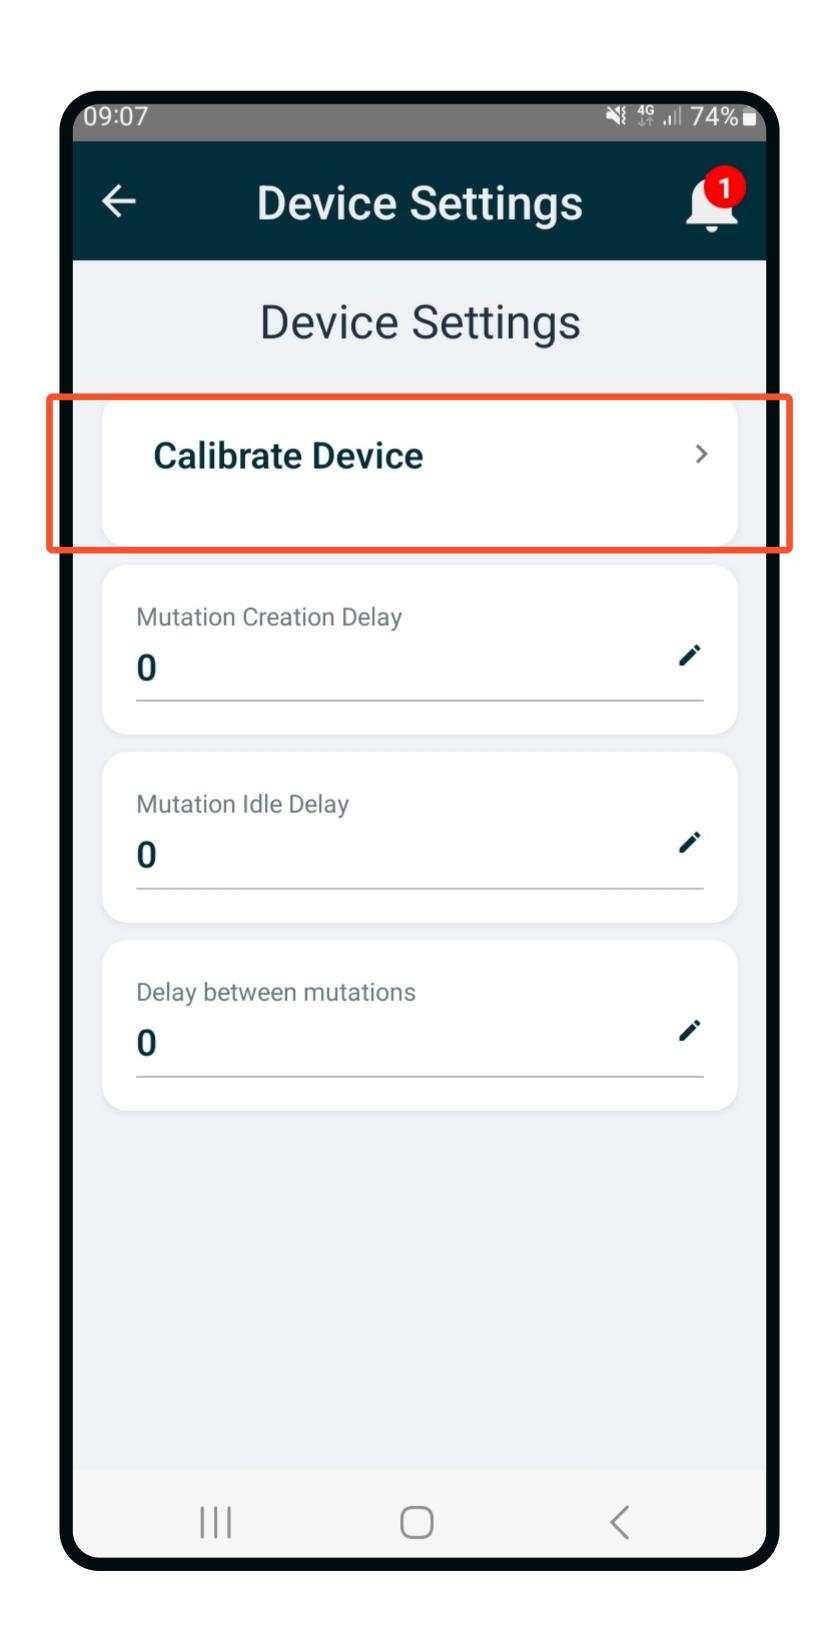


While the wagon is empty, standing on flat ground..



How to calibrate the Feedlync system and the wagon?

6. Get Empty Uvolt.

Hang a test load on the wagon.

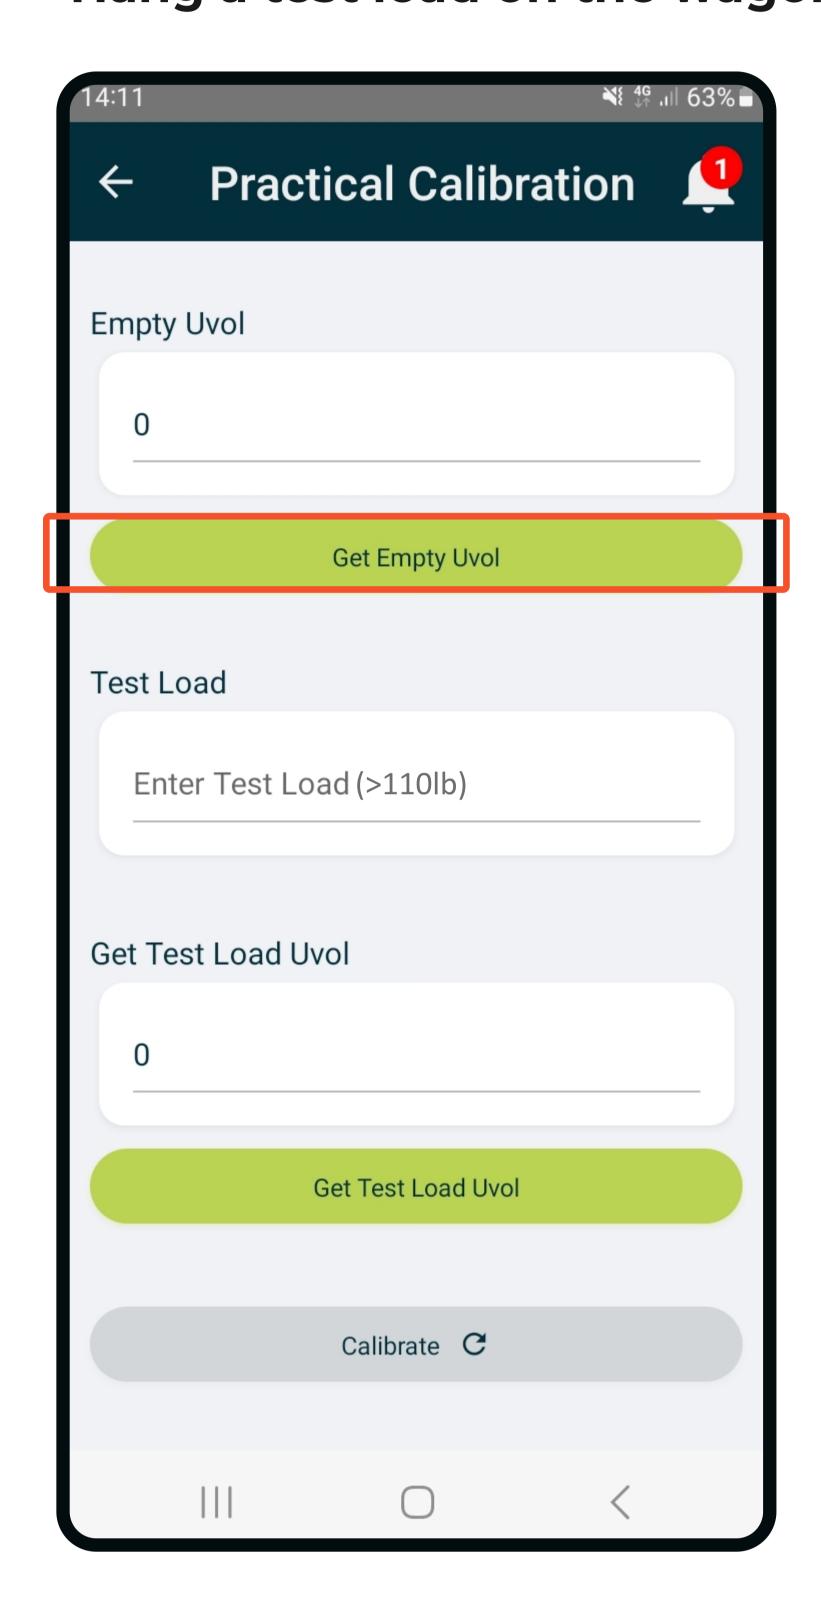


Use a testload, where you know the precise weight.


Distribute the test weight directly on the weight cells.

Enter the weight in the field "Test Load".


7. Get Test Load Uvolt, and press calibrate.

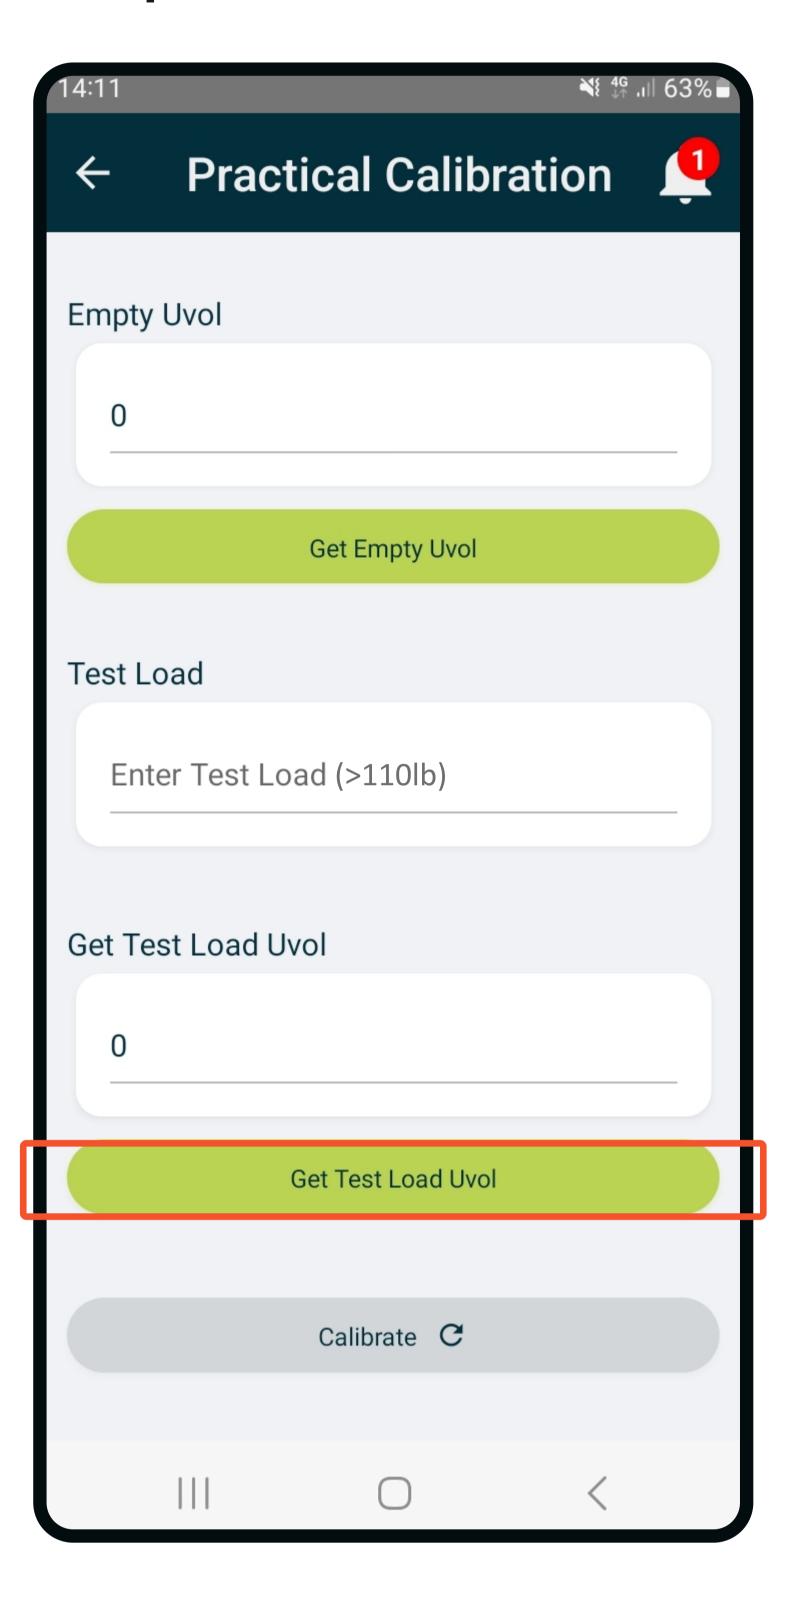

8. Calibration done.

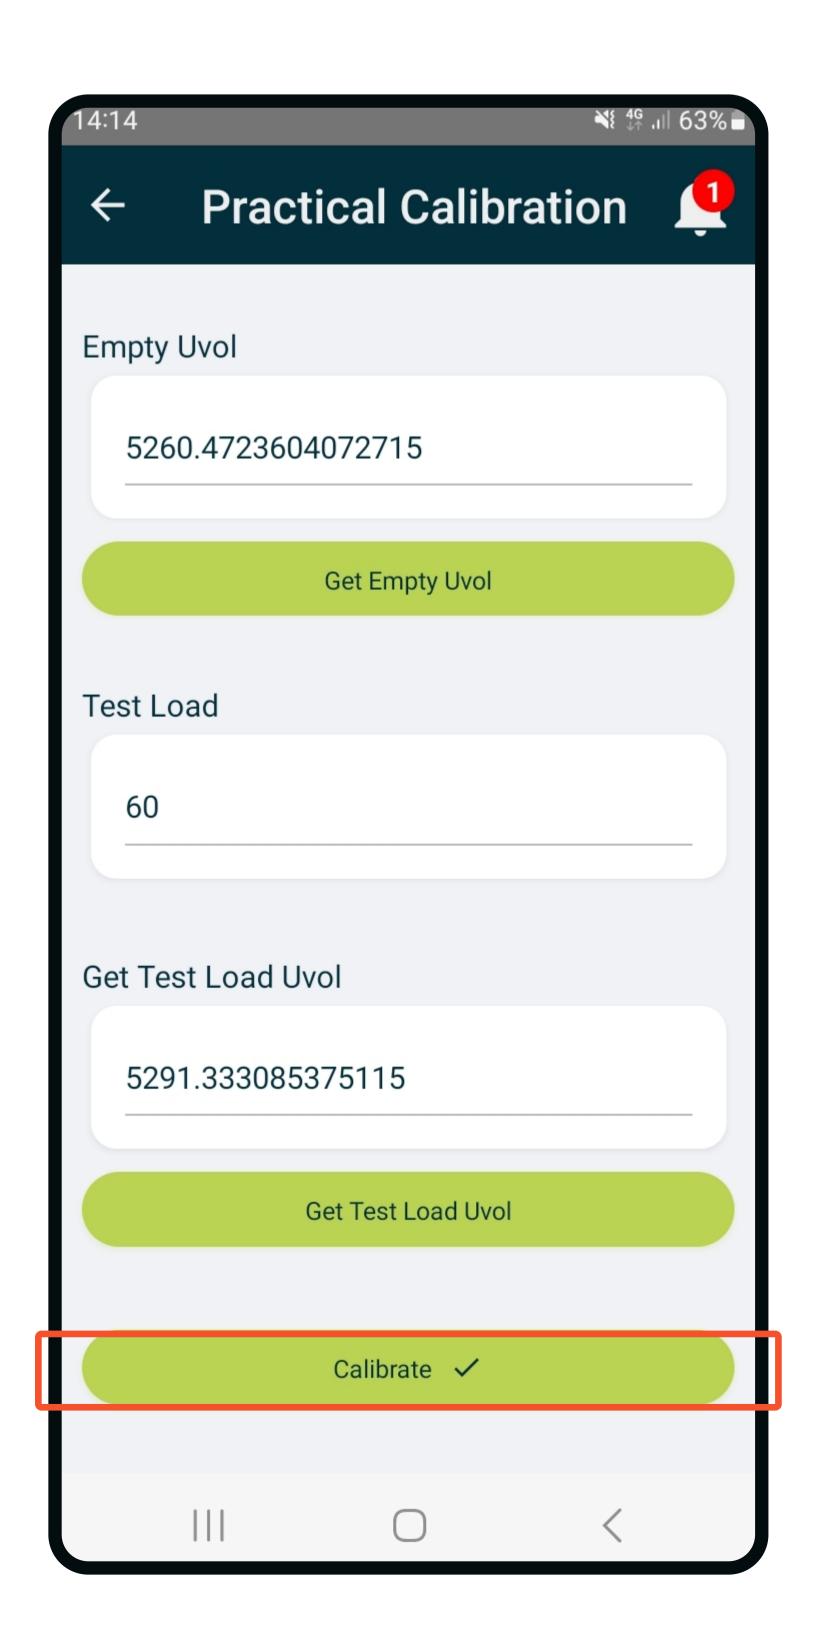

8. You are ready to start feeding.

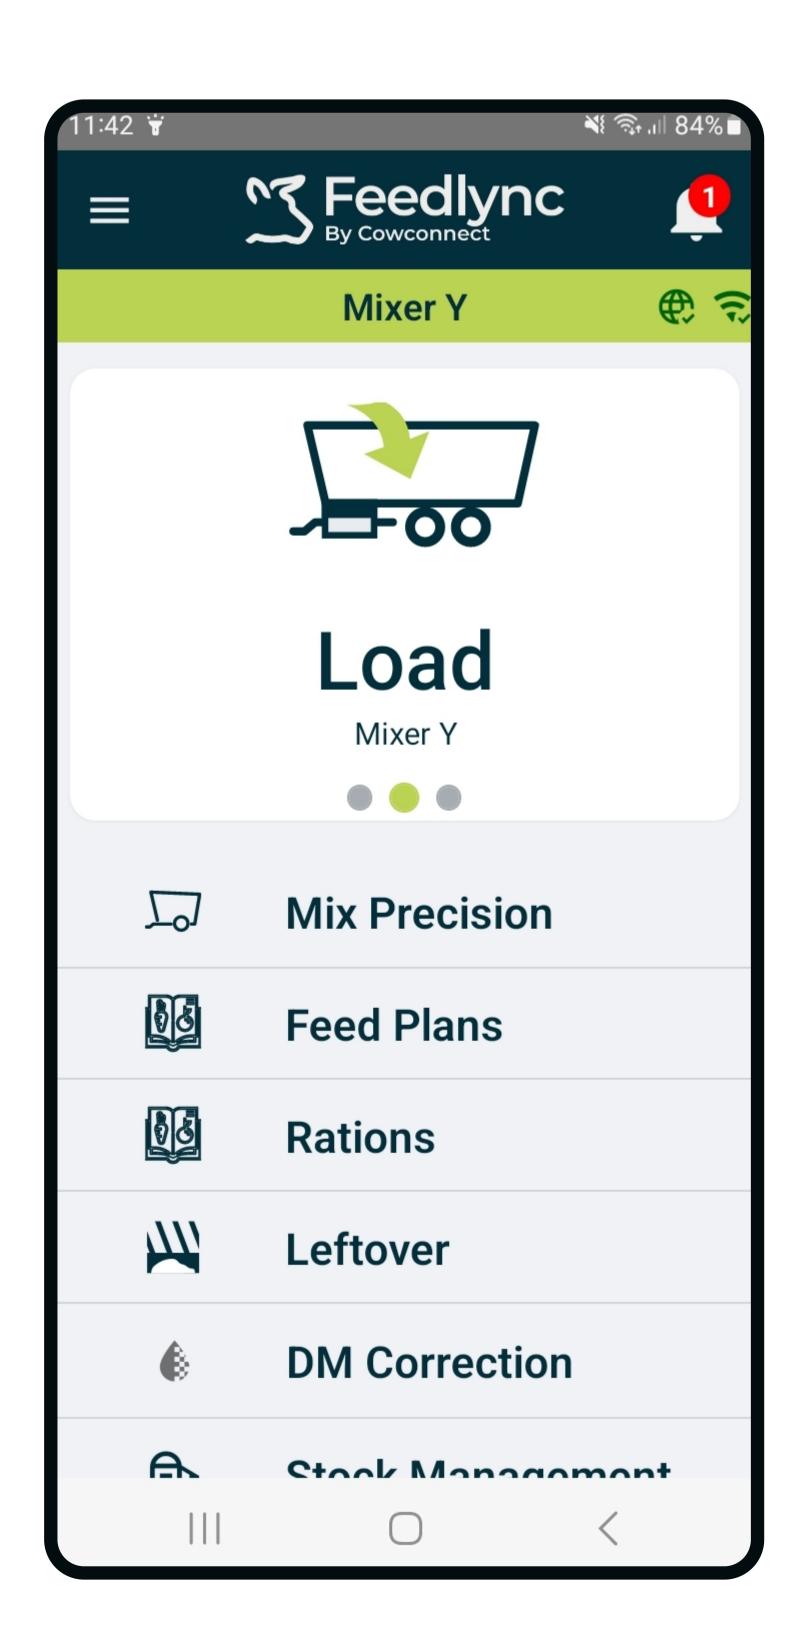

Contact
www.feedlync.com
support@feedlync.com
US (+1) 414 939 6871
UK (+44) 20 3966 90 63
DK (+45) 32 25 89 56