



How to calibrate the Feedlyn system and the wagon?


1. Log in to the Feedlyn app using your credentials.

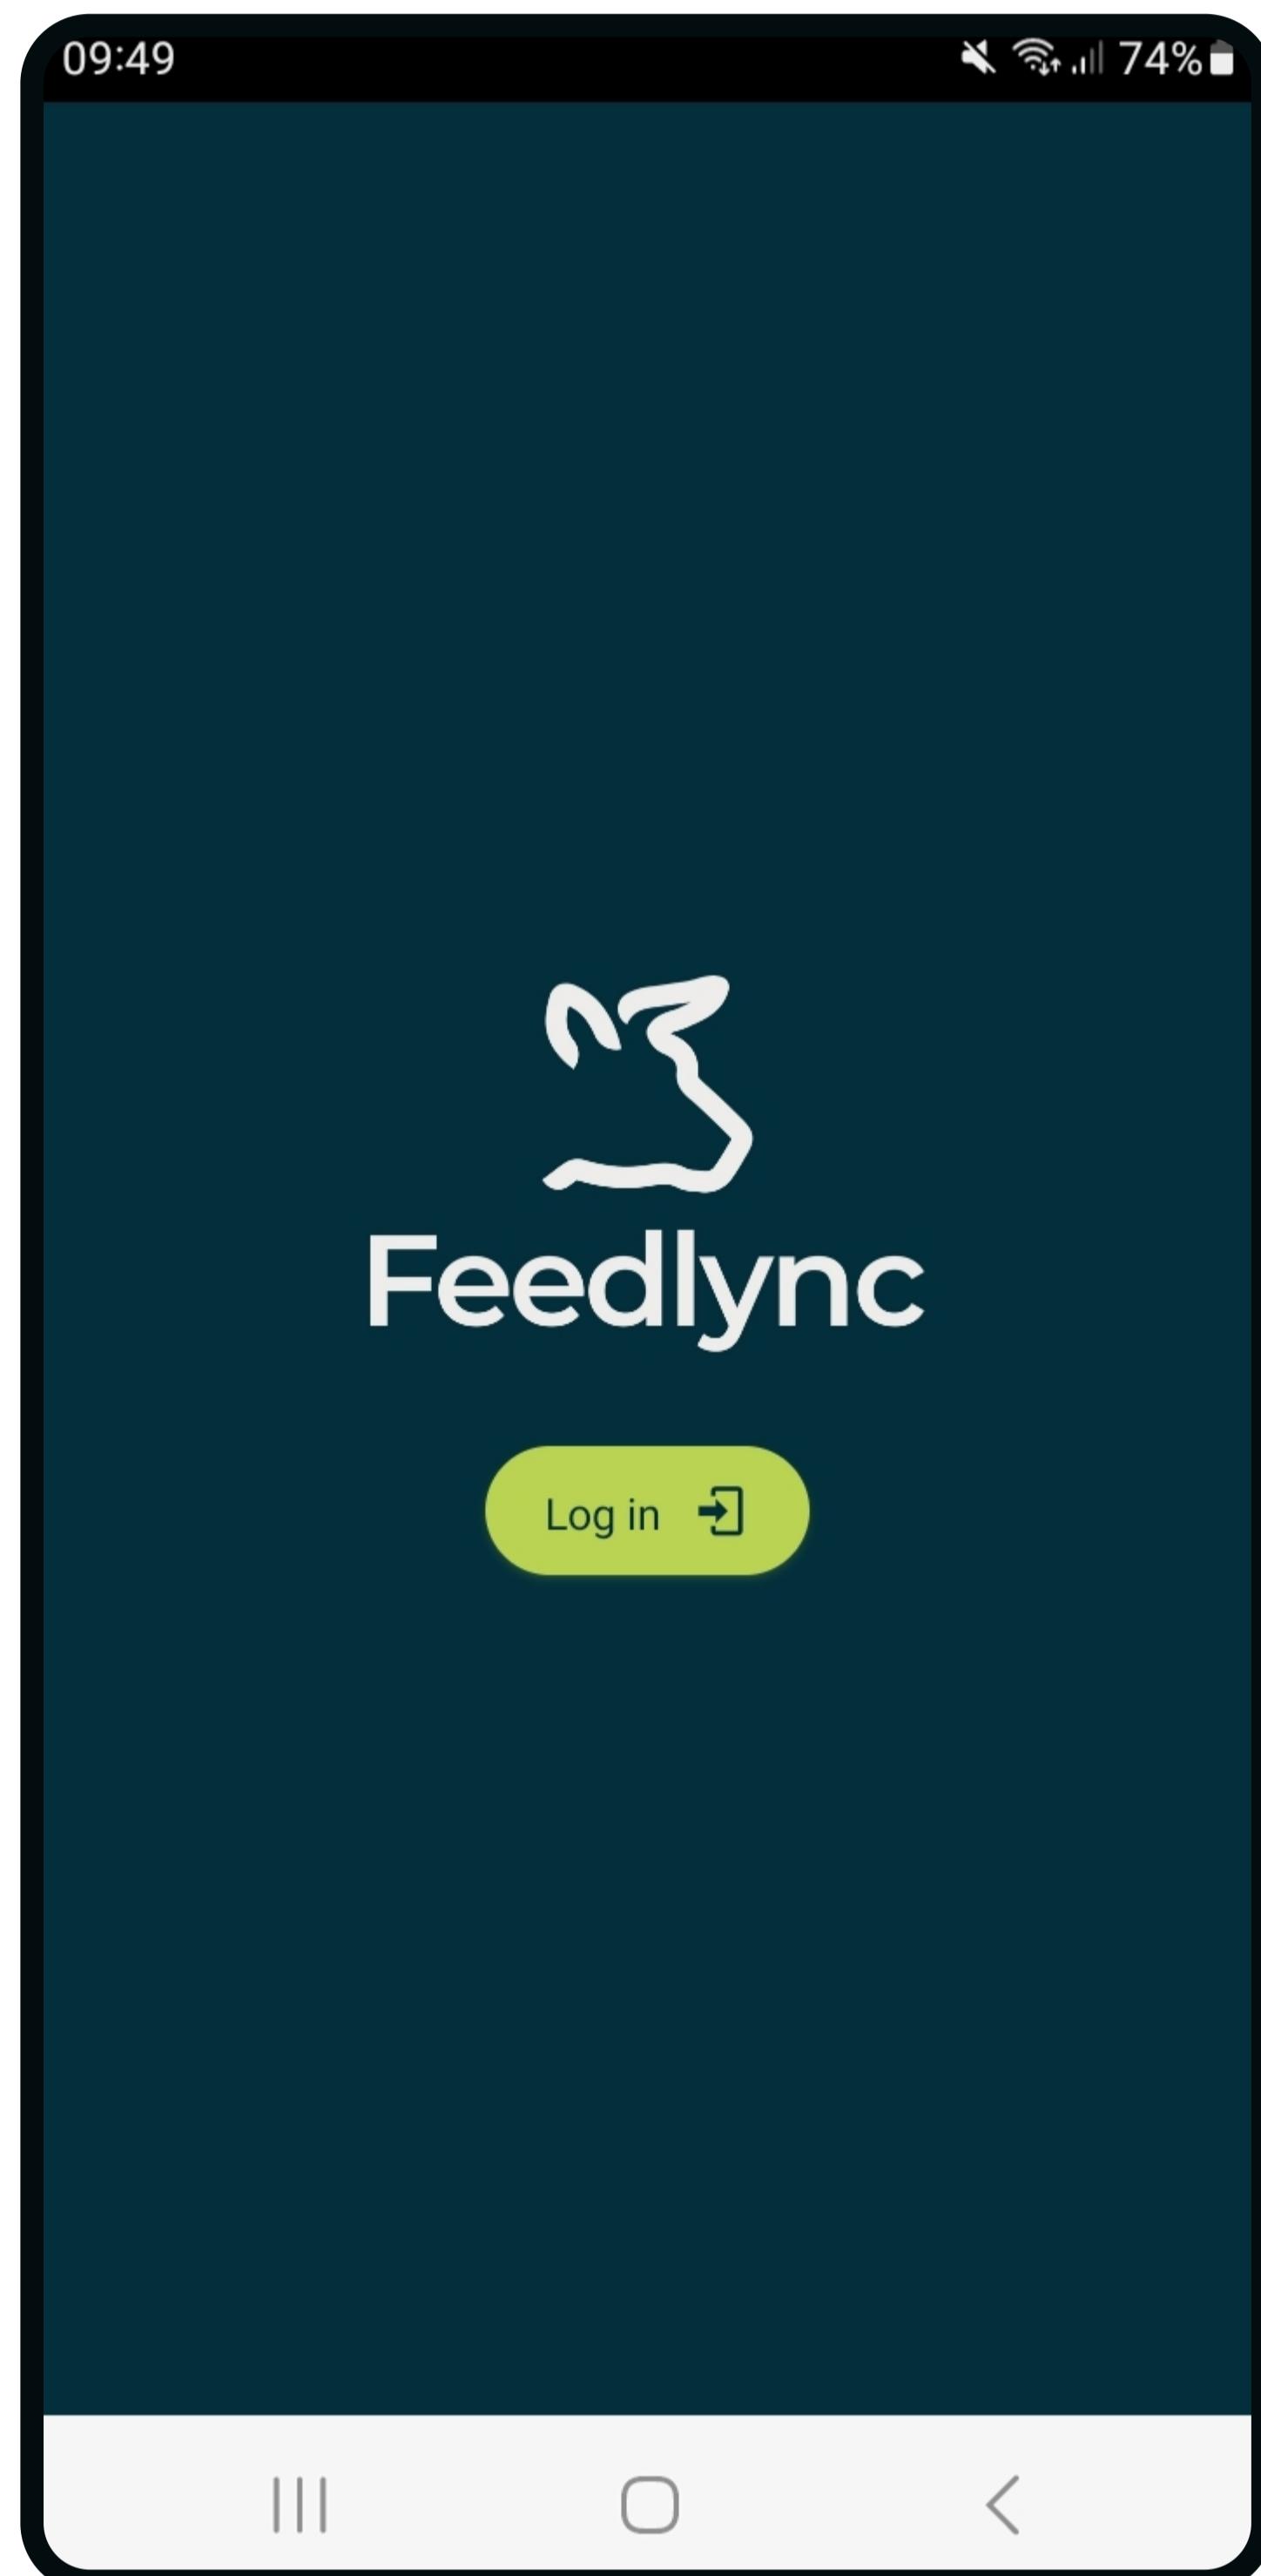


2. Tap the menu icon.

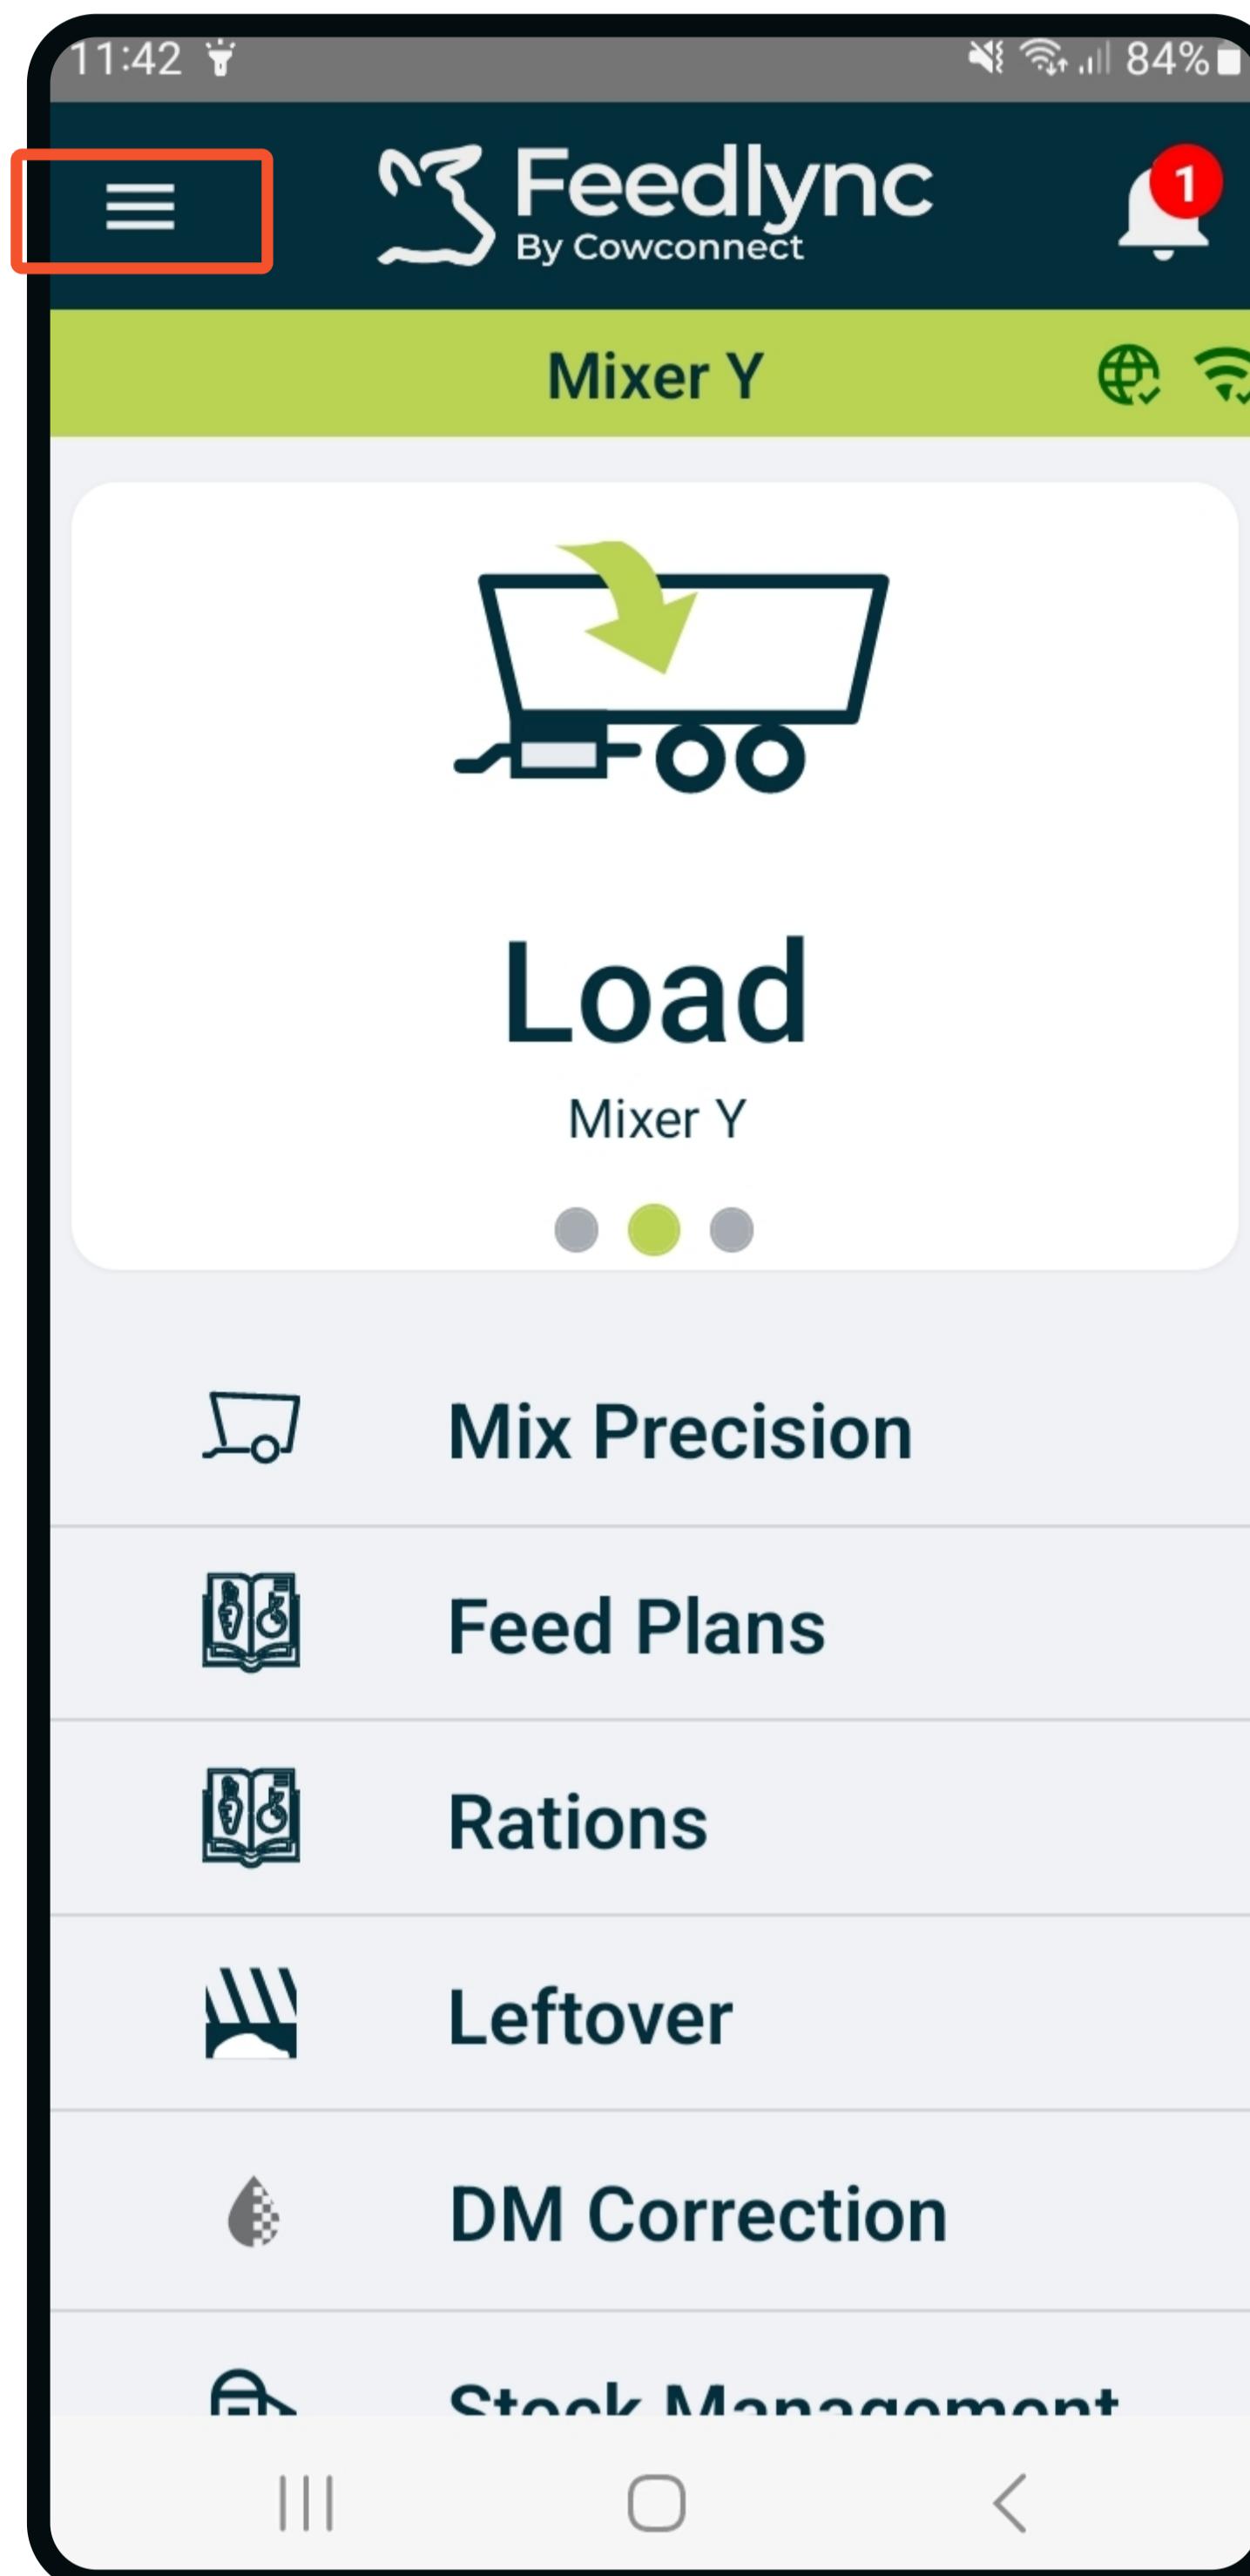


3. Select the cog icon.

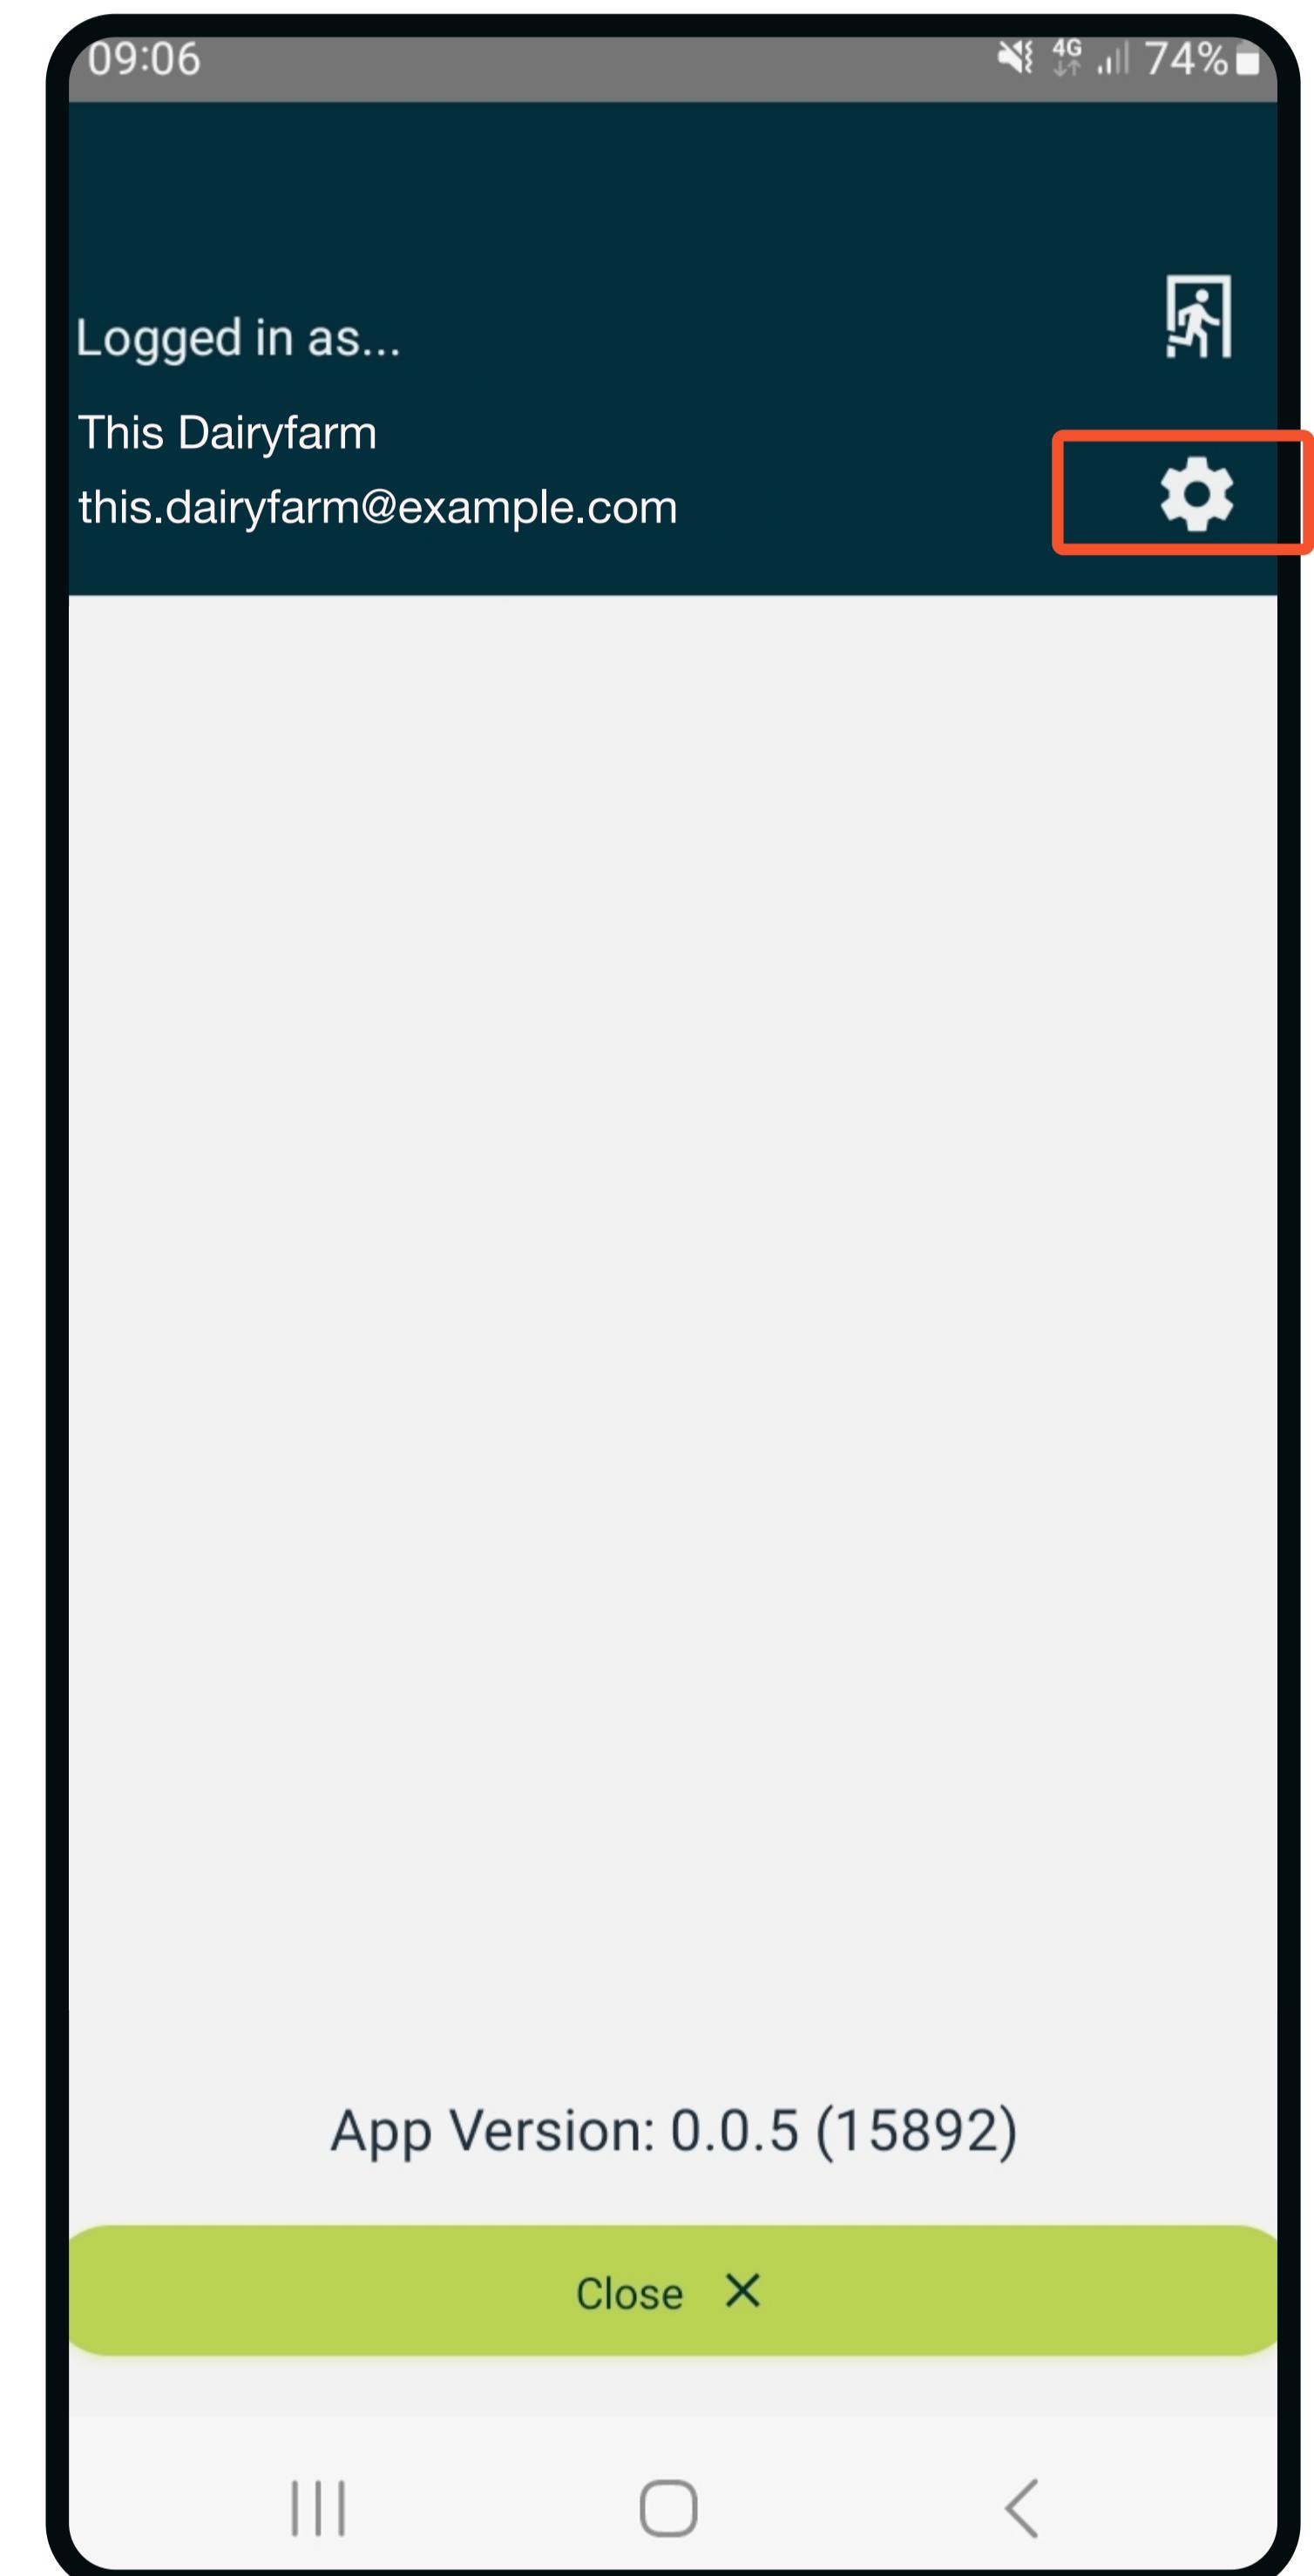

4. Then choose Device Settings.

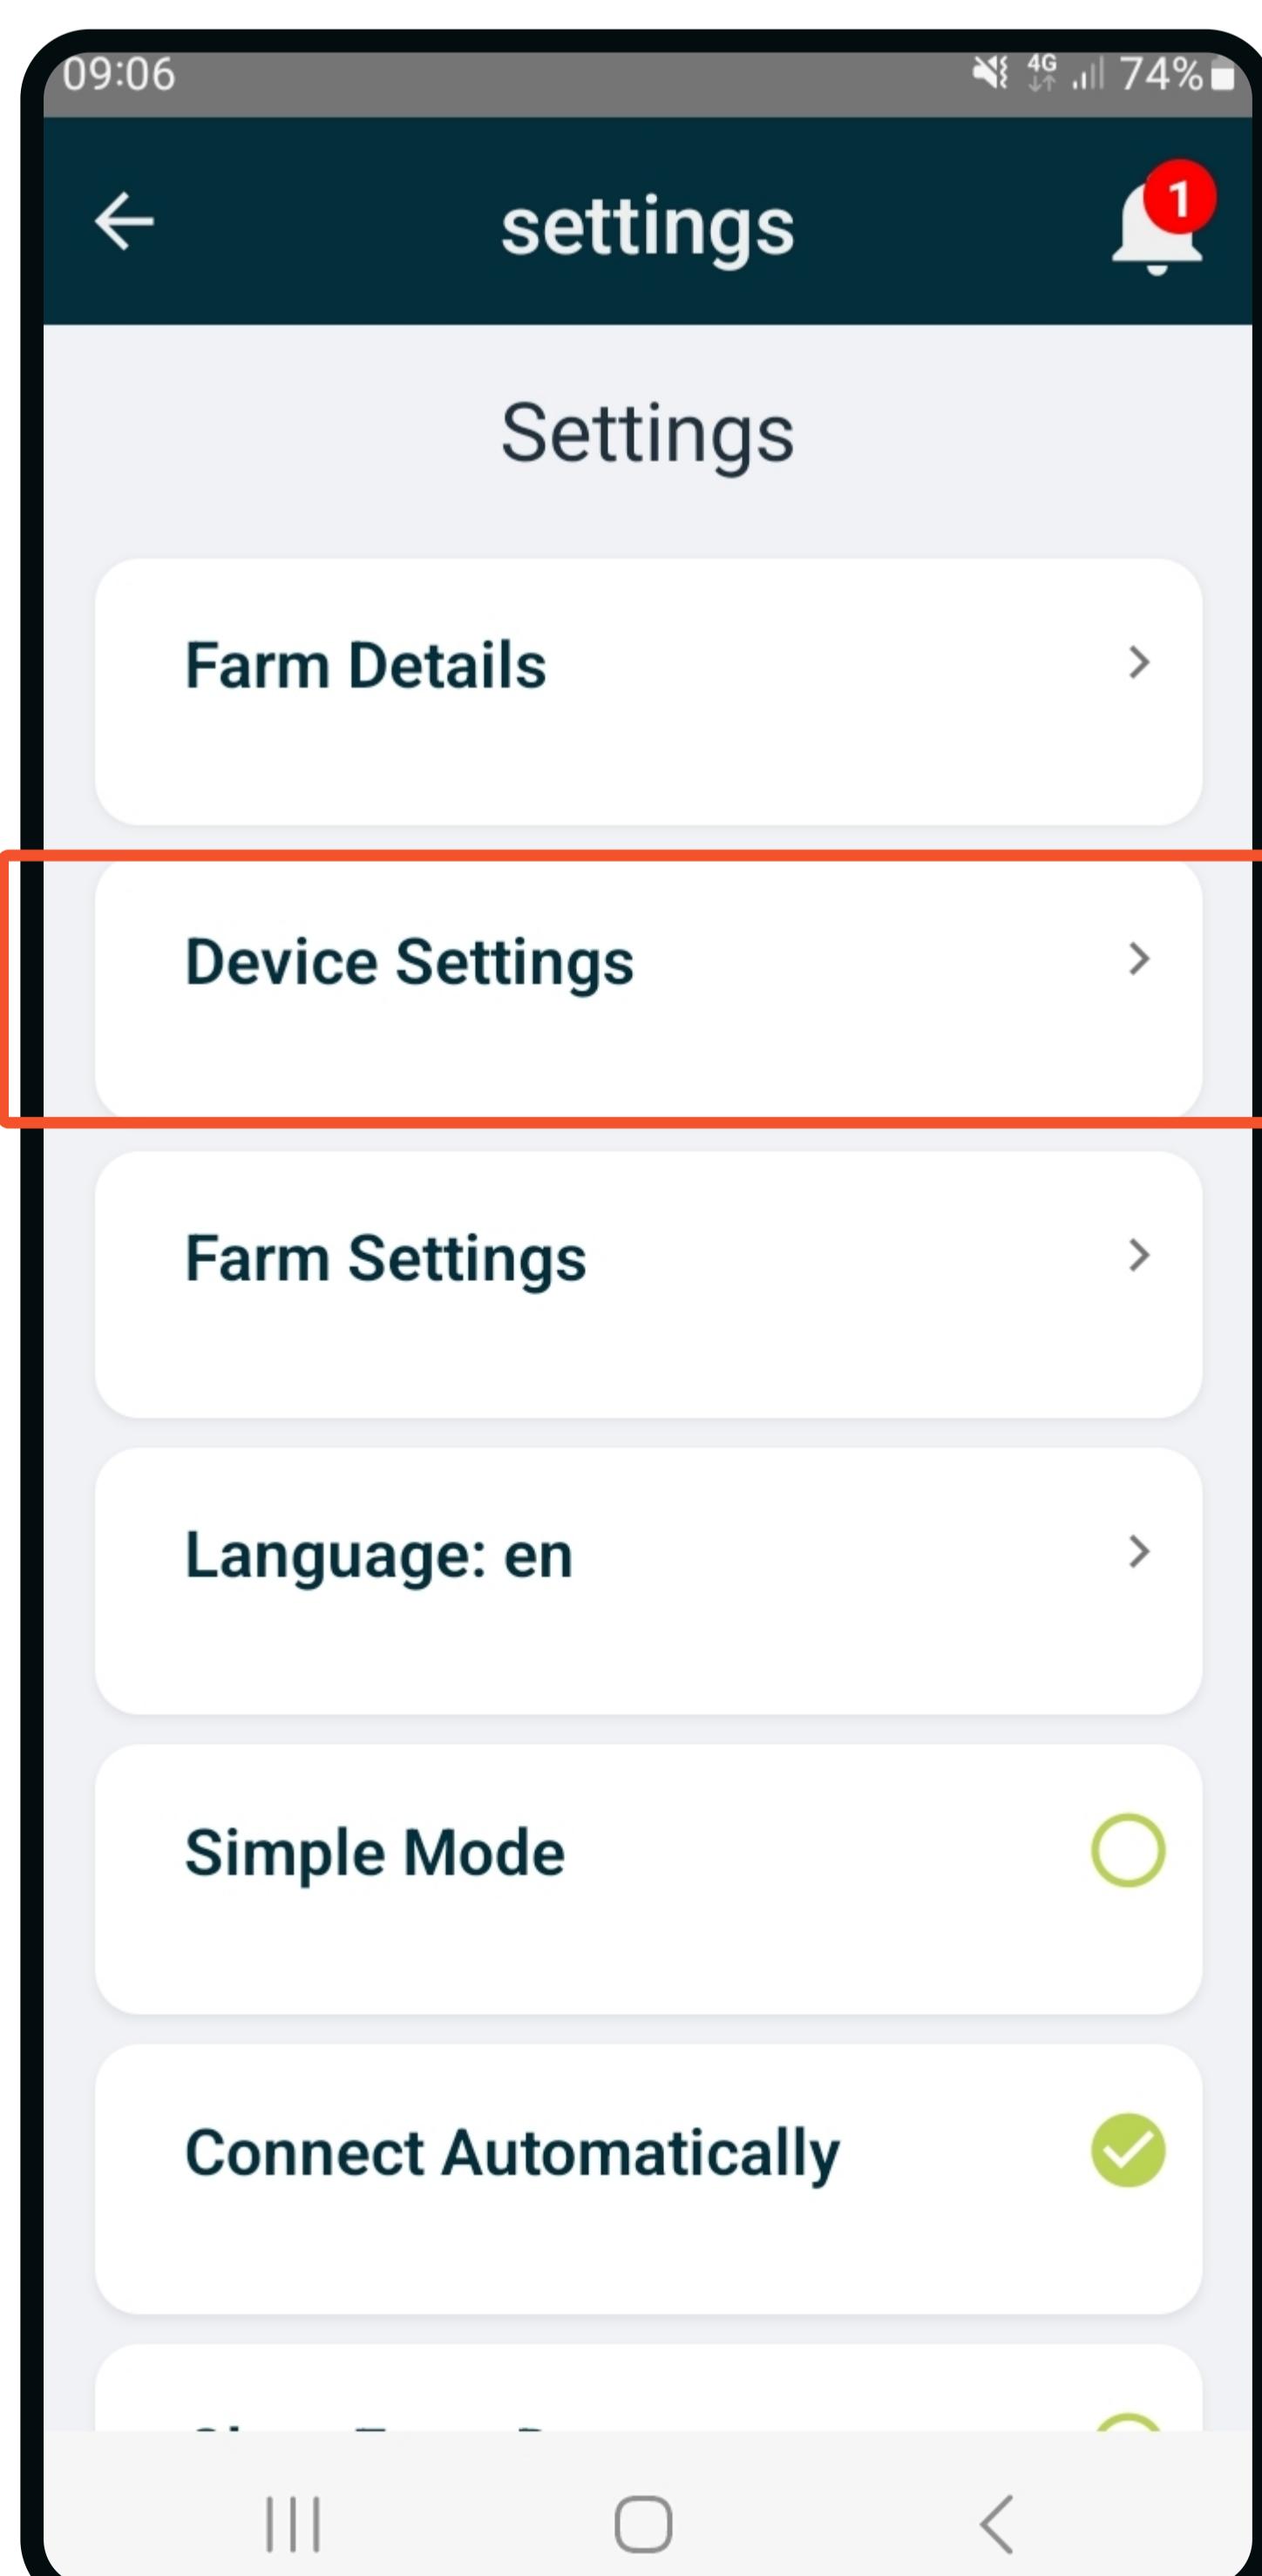

5. Ready to calibrate device.

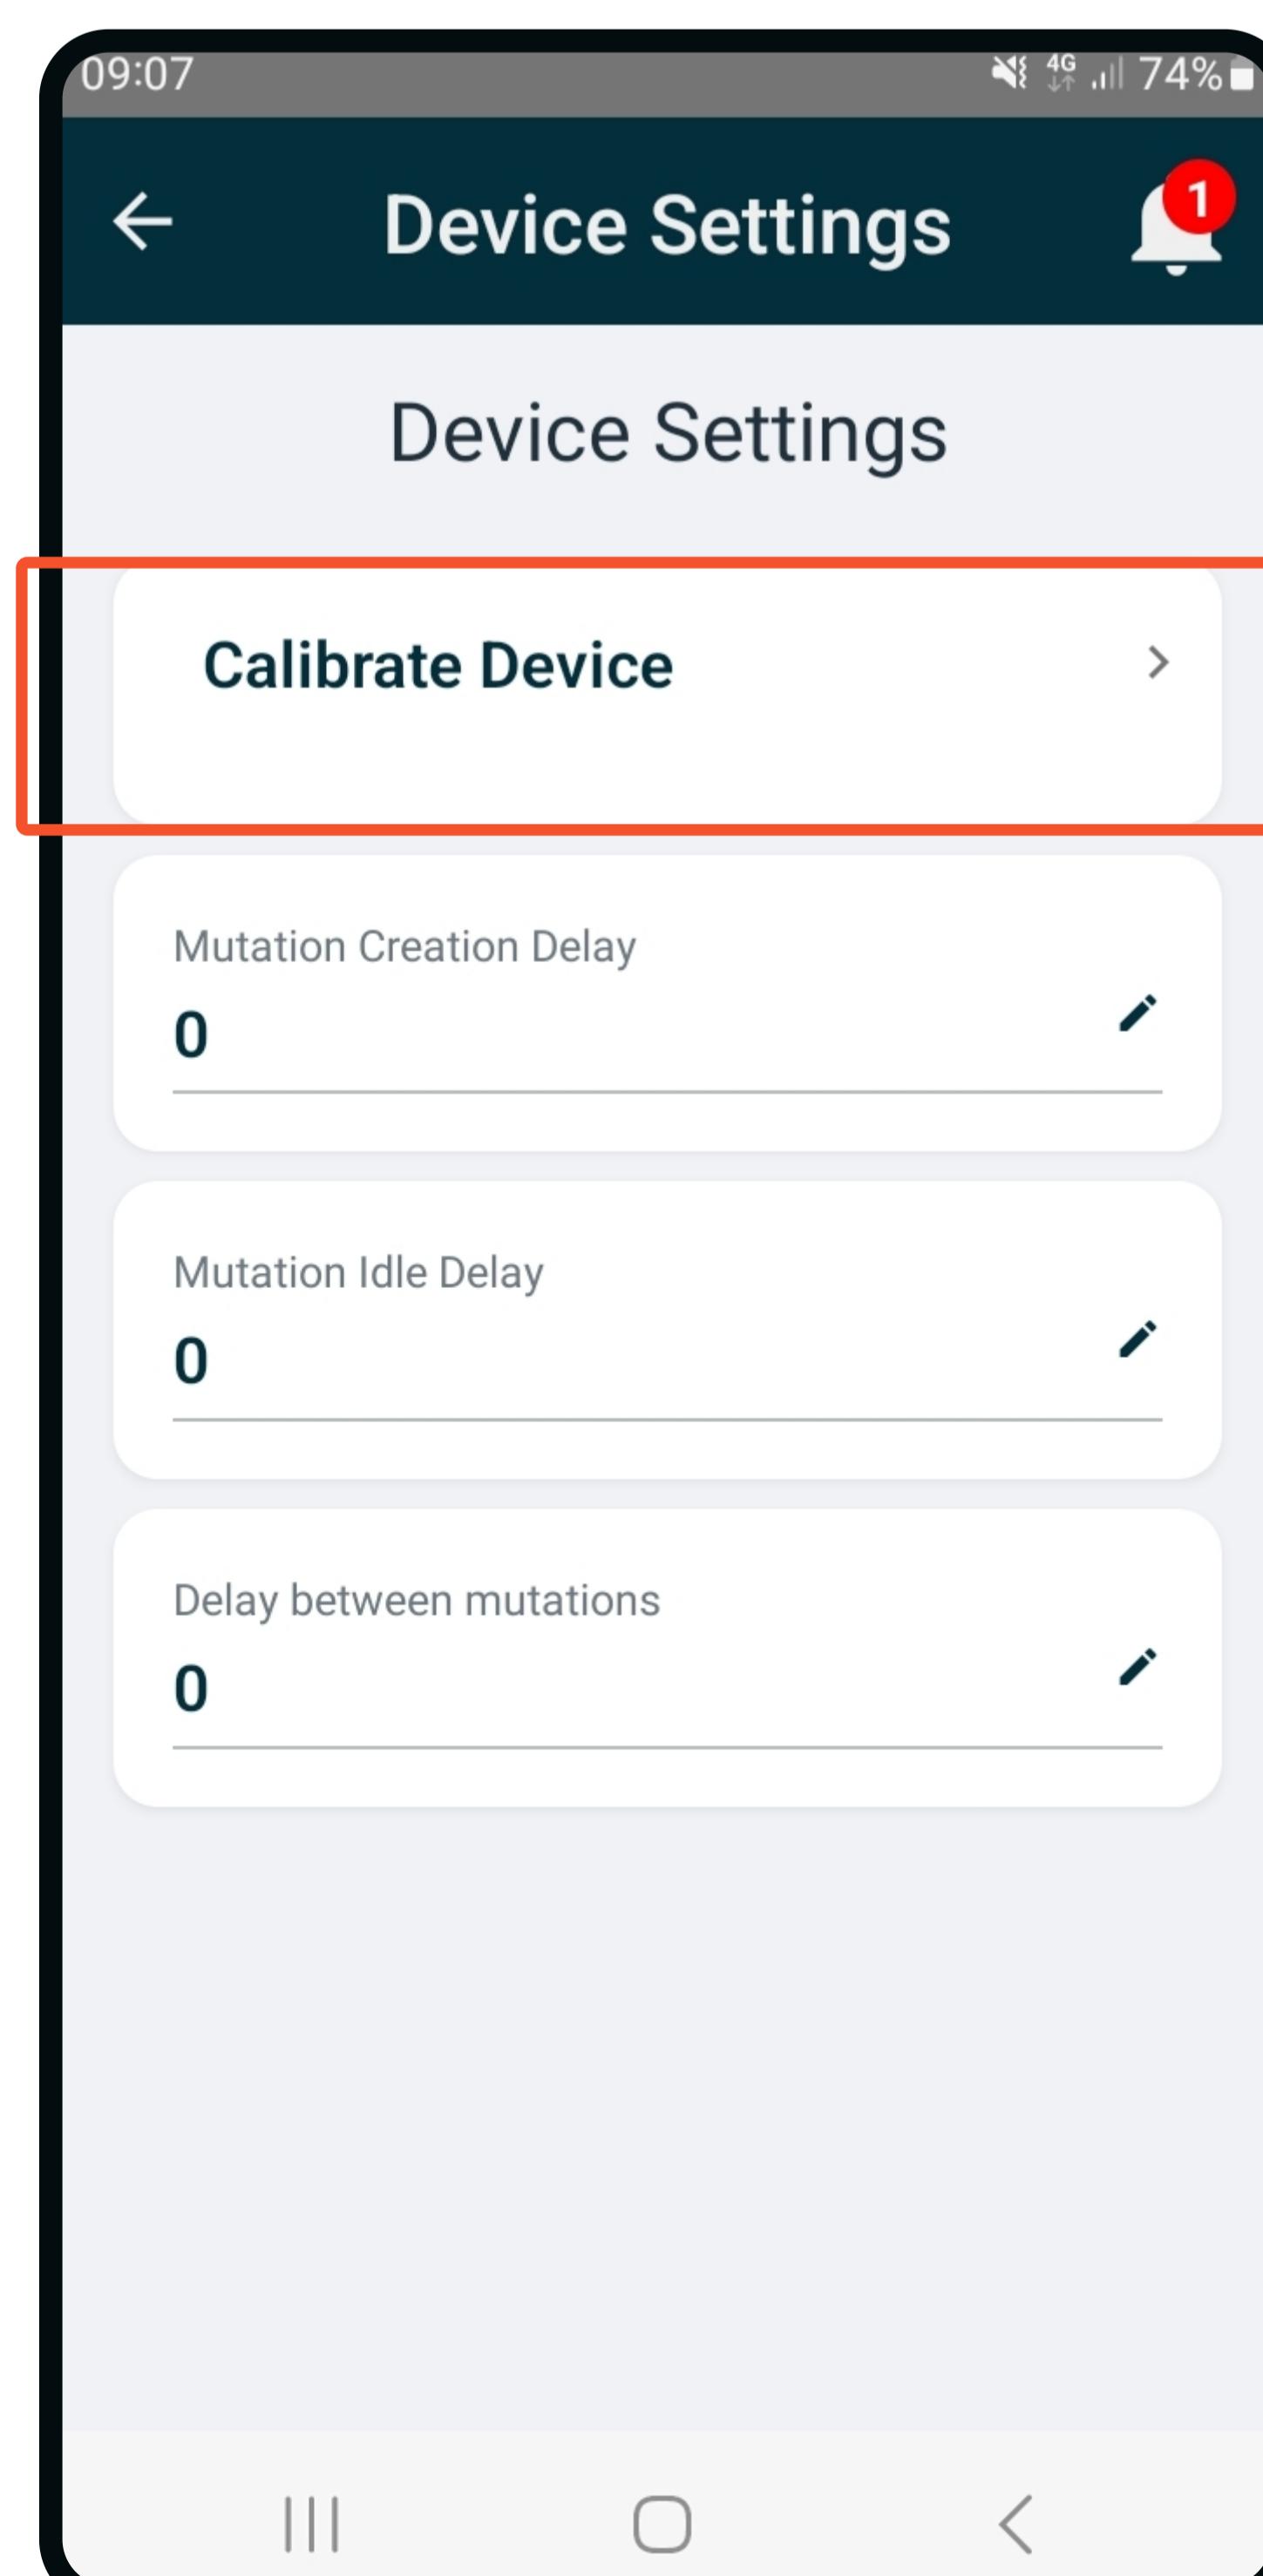


While the wagon is empty,
standing on flat ground..

How to calibrate the FeedlynC system and the wagon?

6. Get Empty Uvolt.

Hang a test load on the wagon.

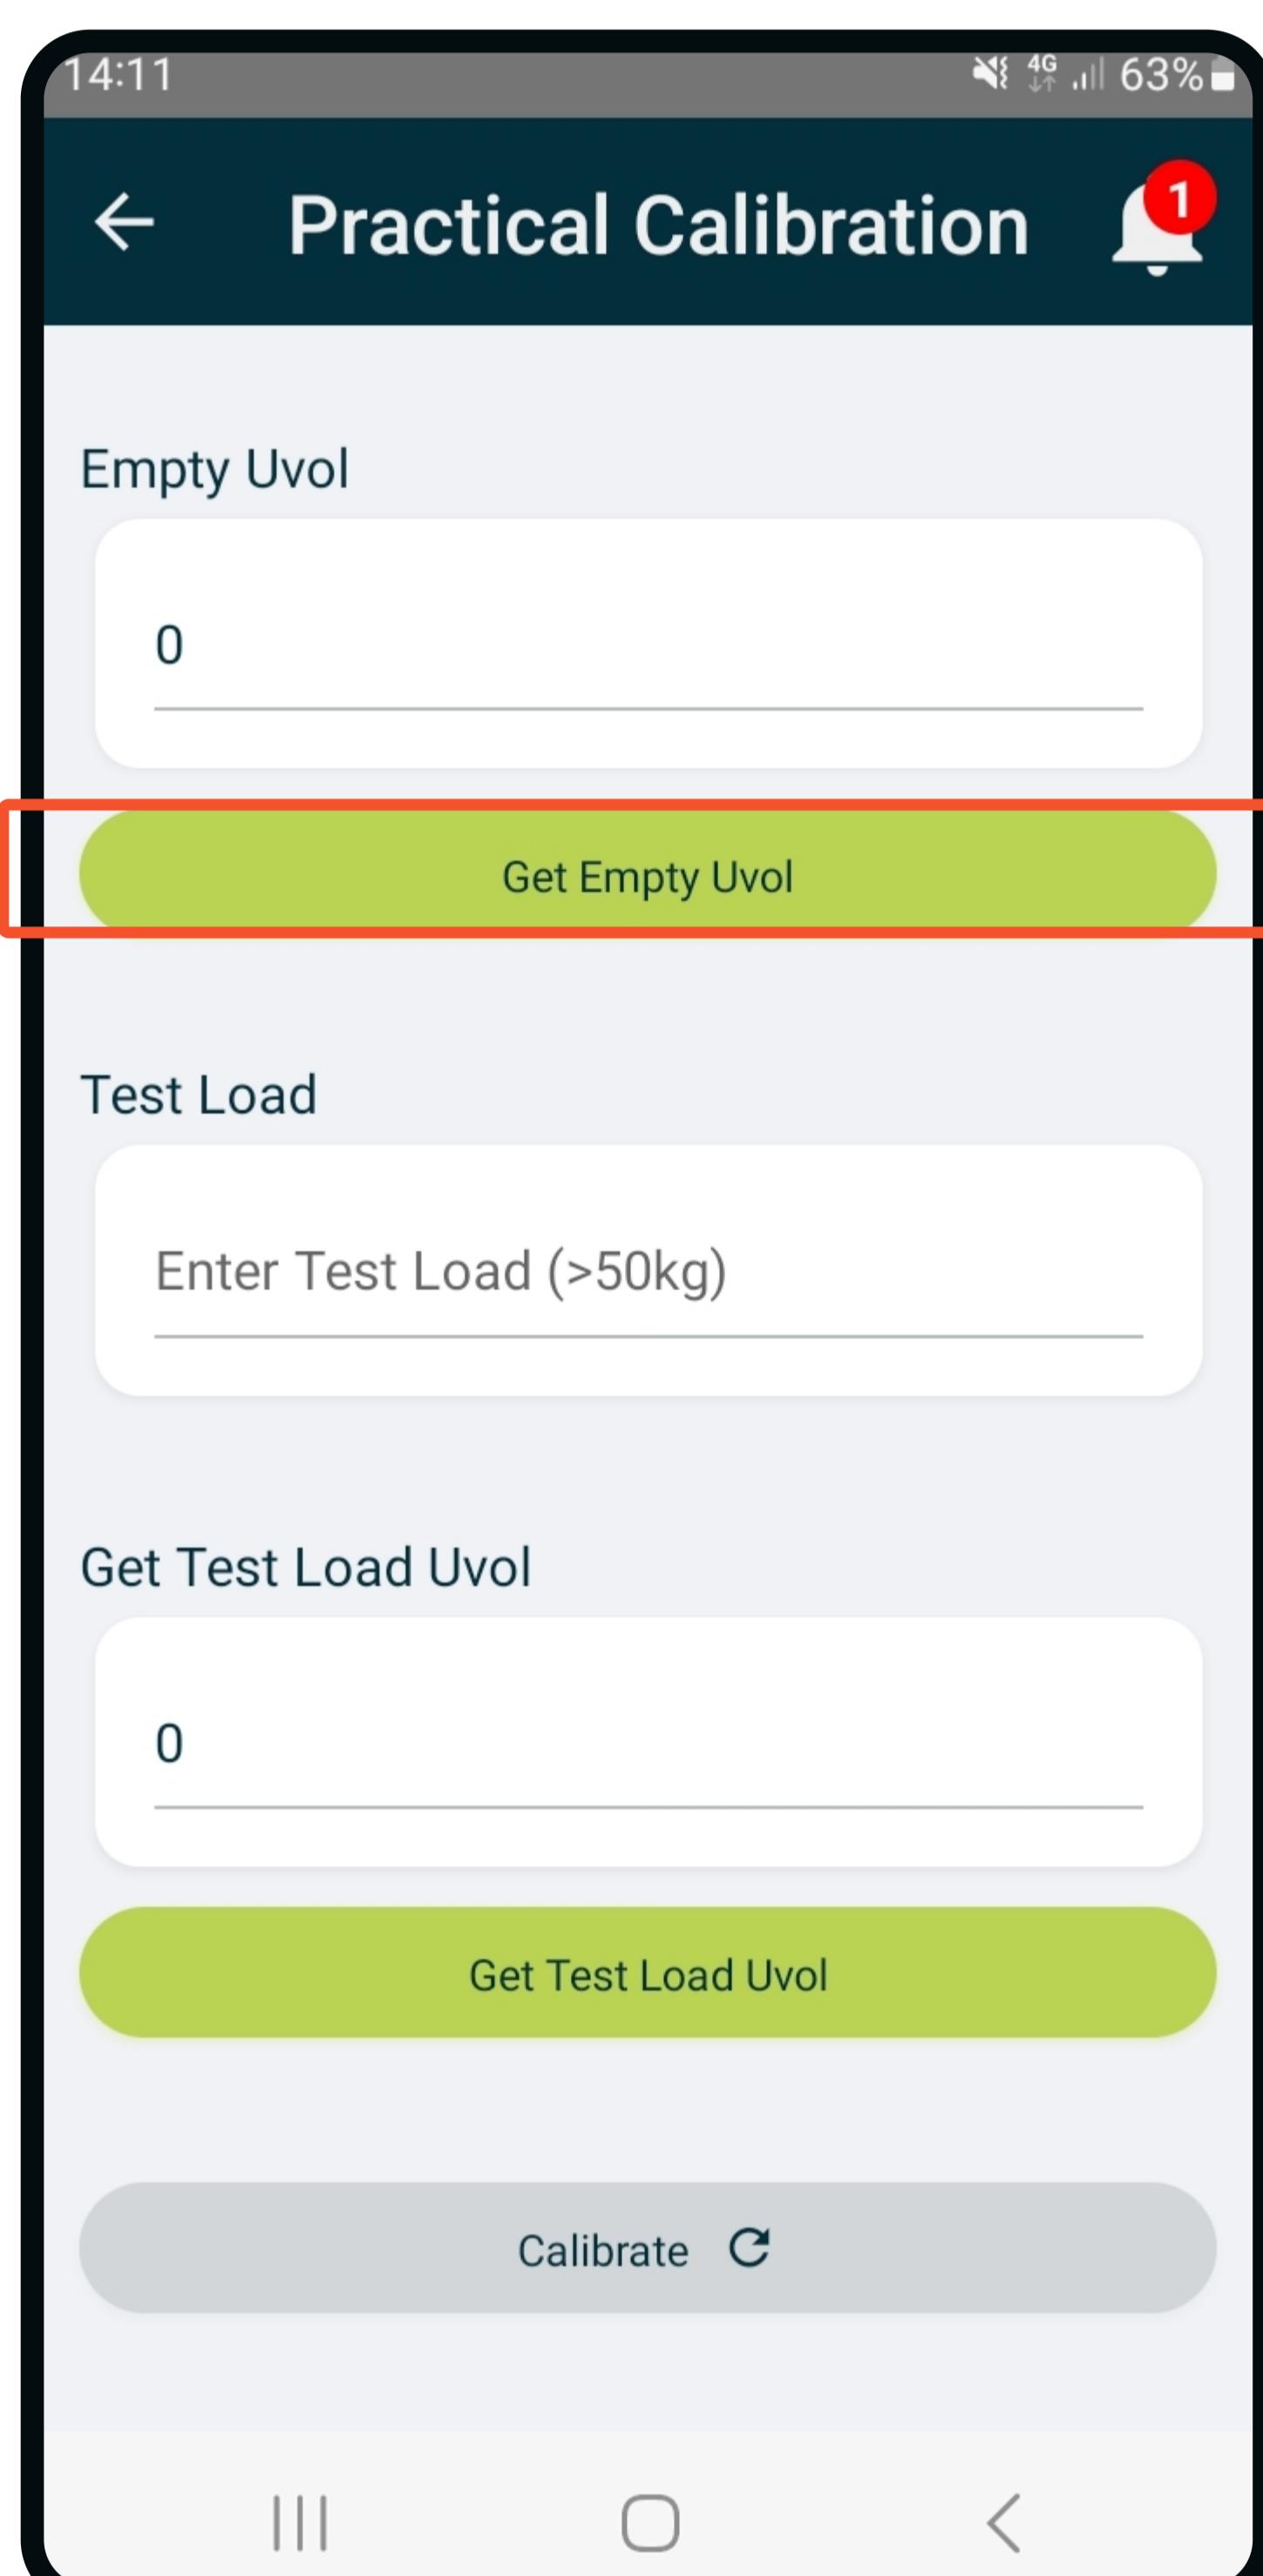


Use a testload, where you know the precise weight.

Distribute the test weight directly on the weight cells.



Enter the weight in the field Test Load.

7. Get Test Load Uvolt, and press calibrate.

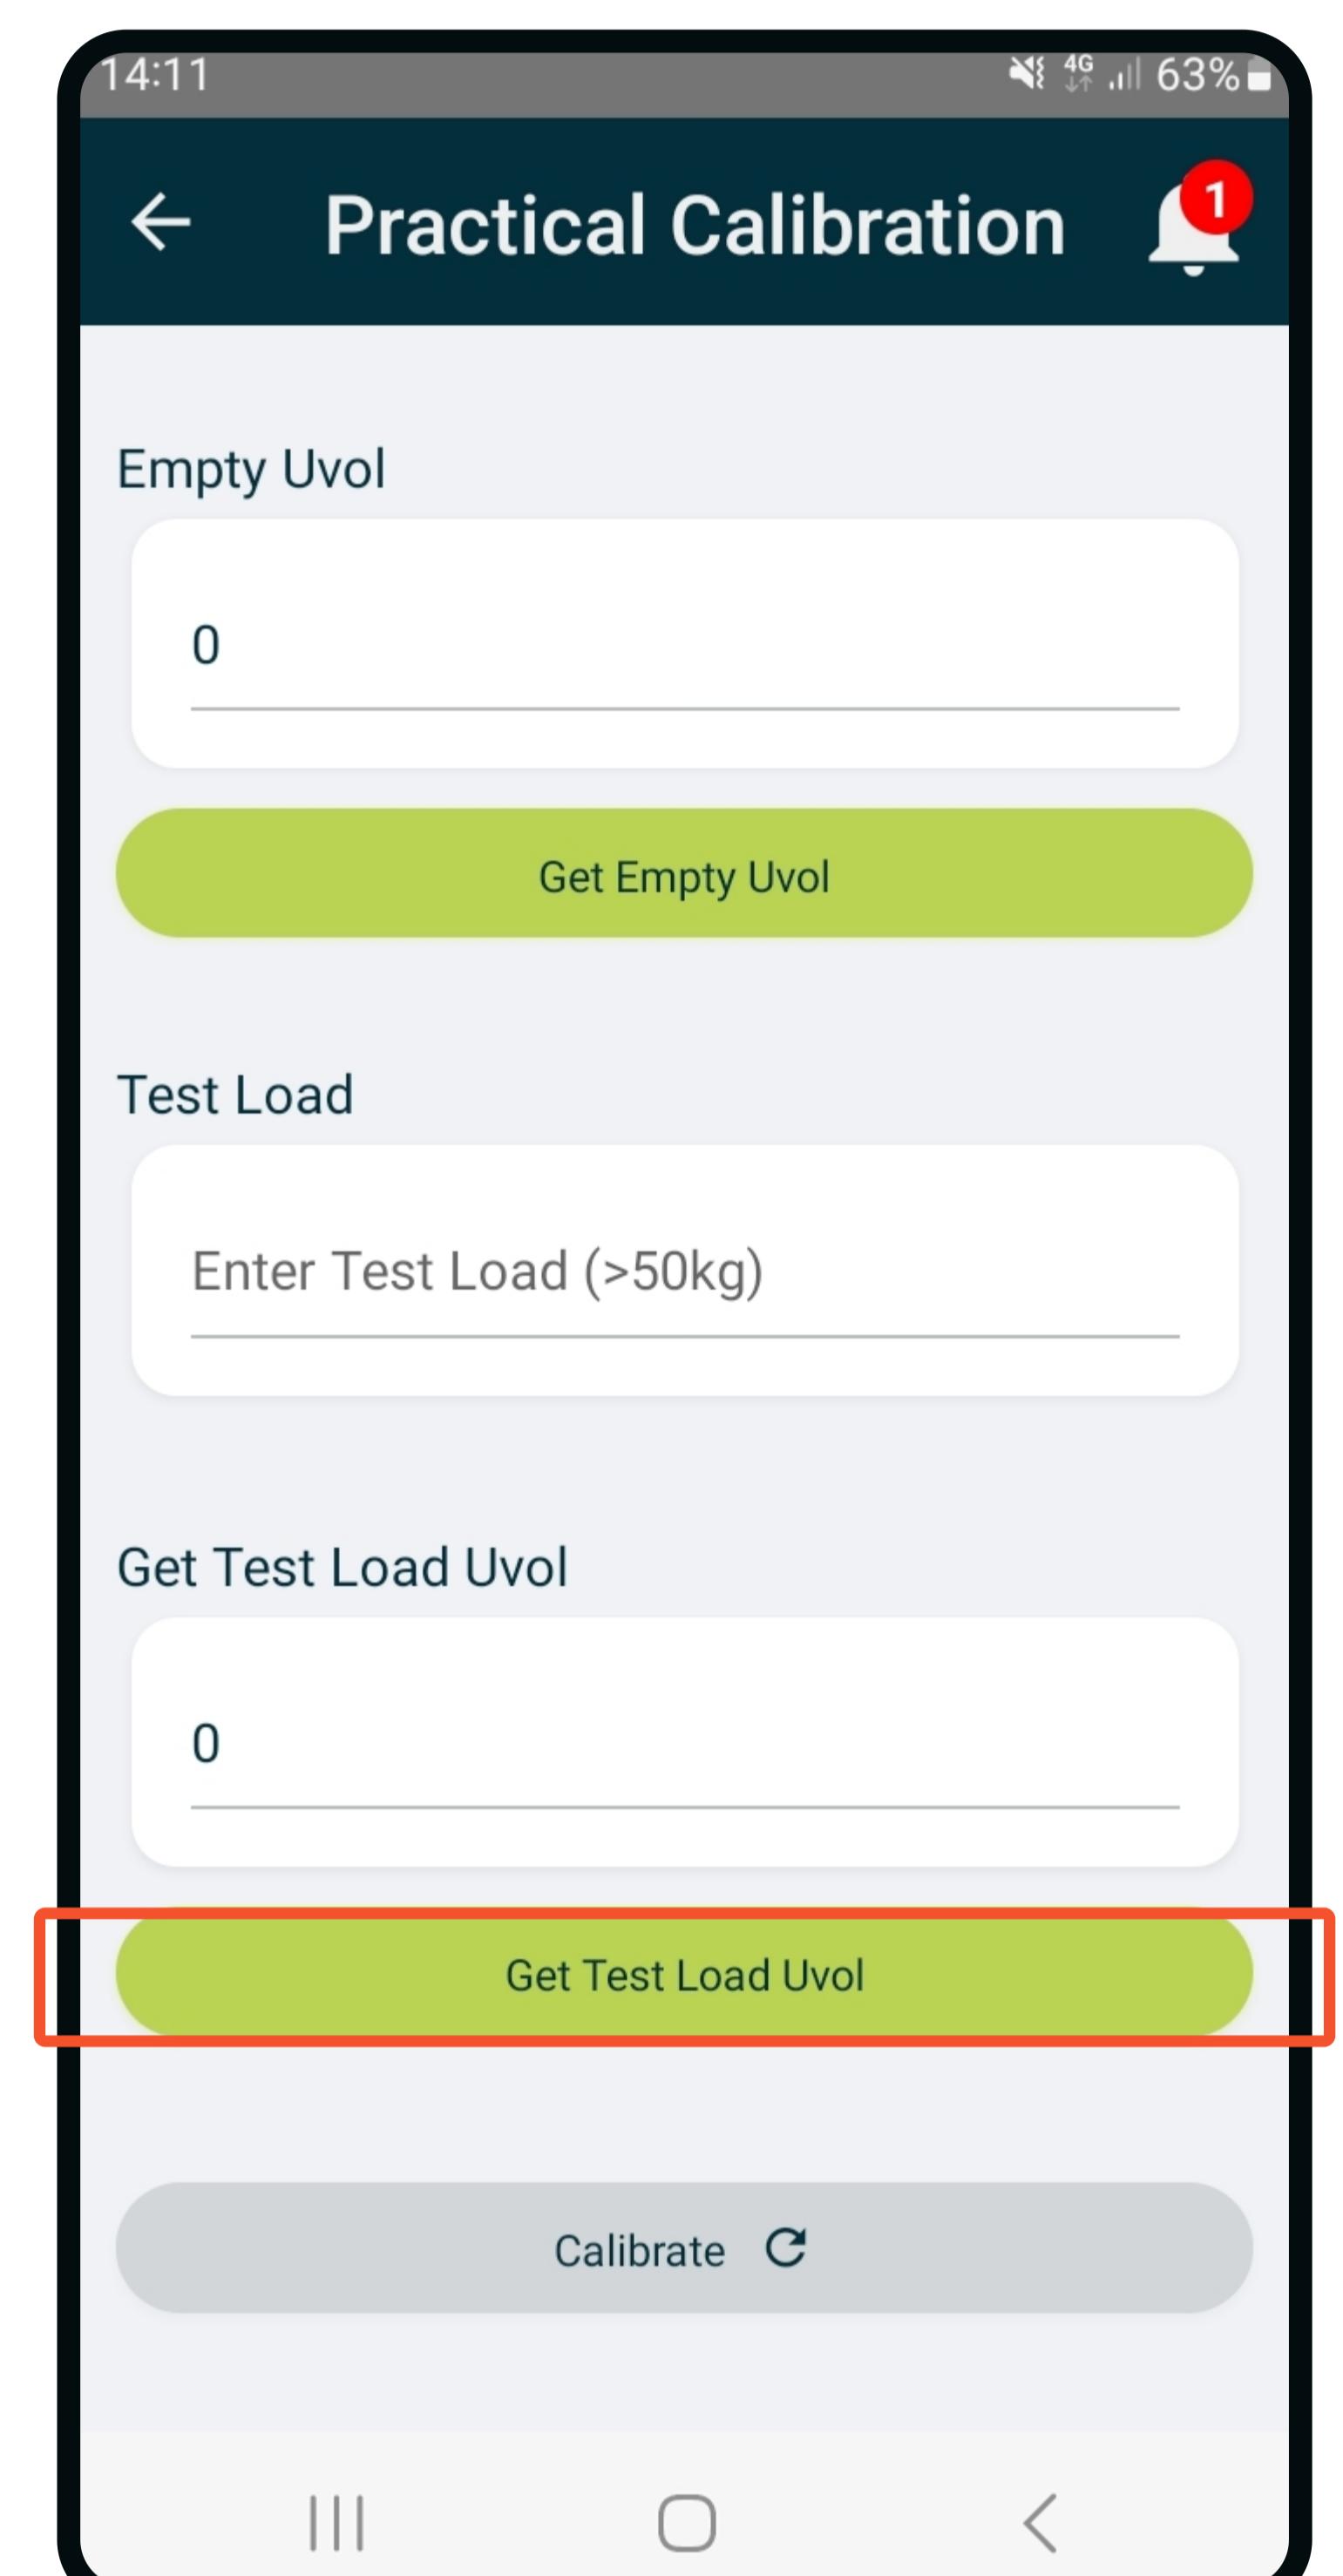

8. Calibration done.

8. You are ready to start feeding.

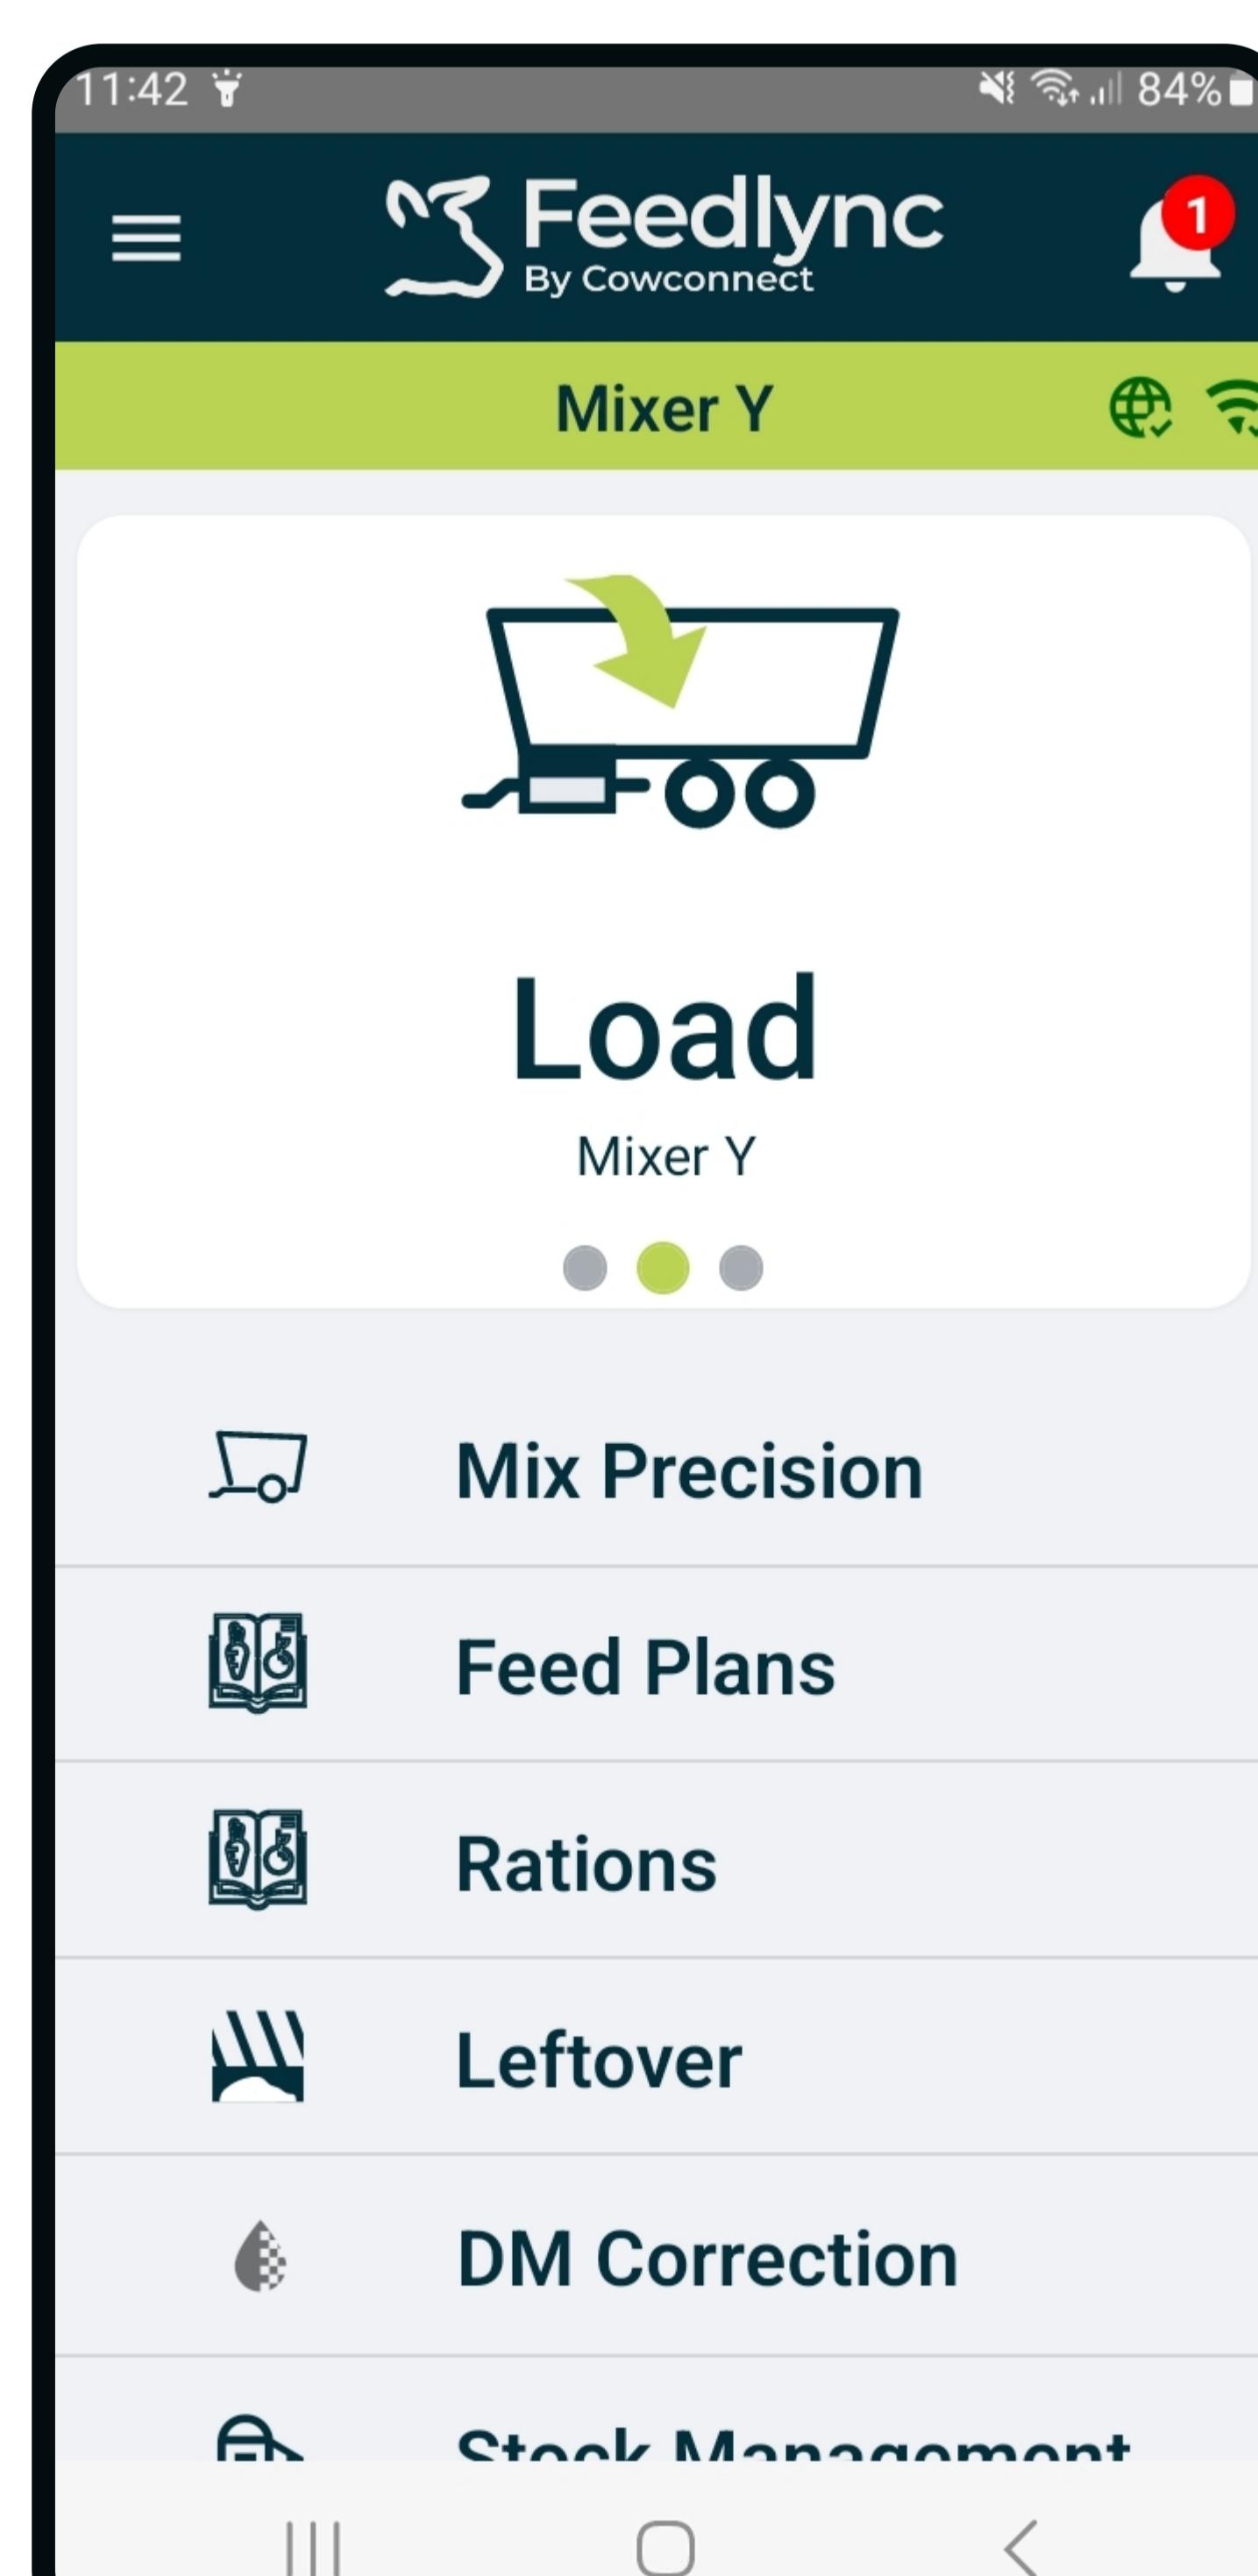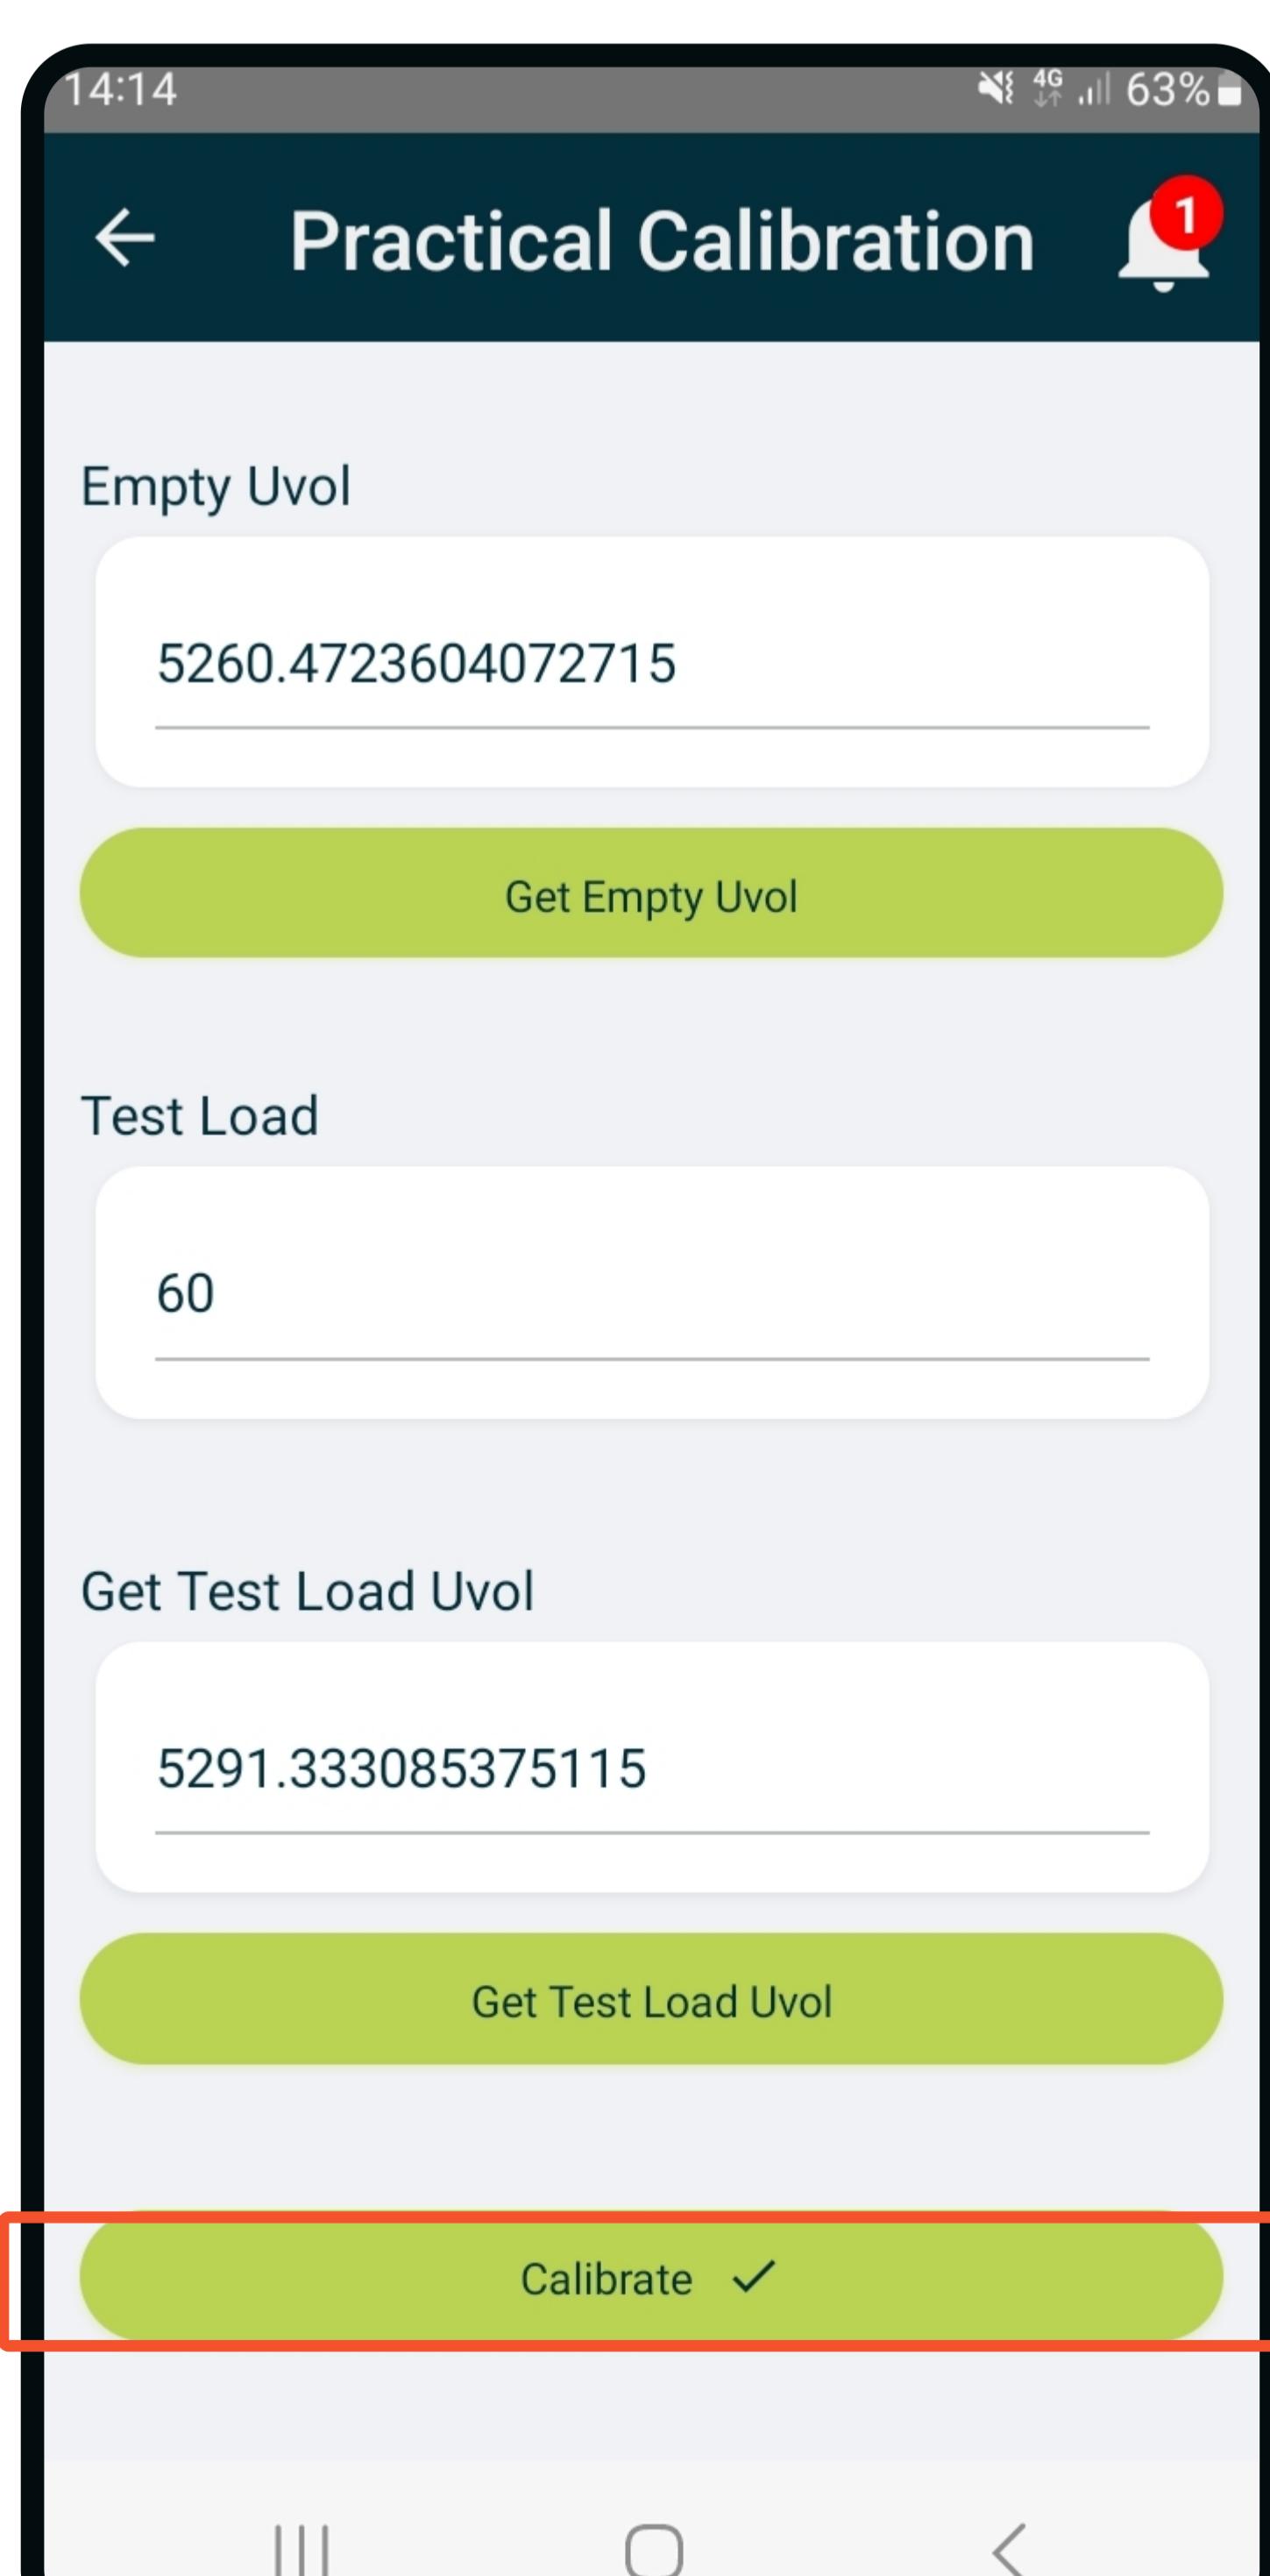

Contact

www.feedlynC.com

support@feedlynC.com

UK (+44) 20 3966 90 63

DK (+45) 32 25 89 56